



iLINQ LQGK : Gland Plate Kit

Assembly Manual

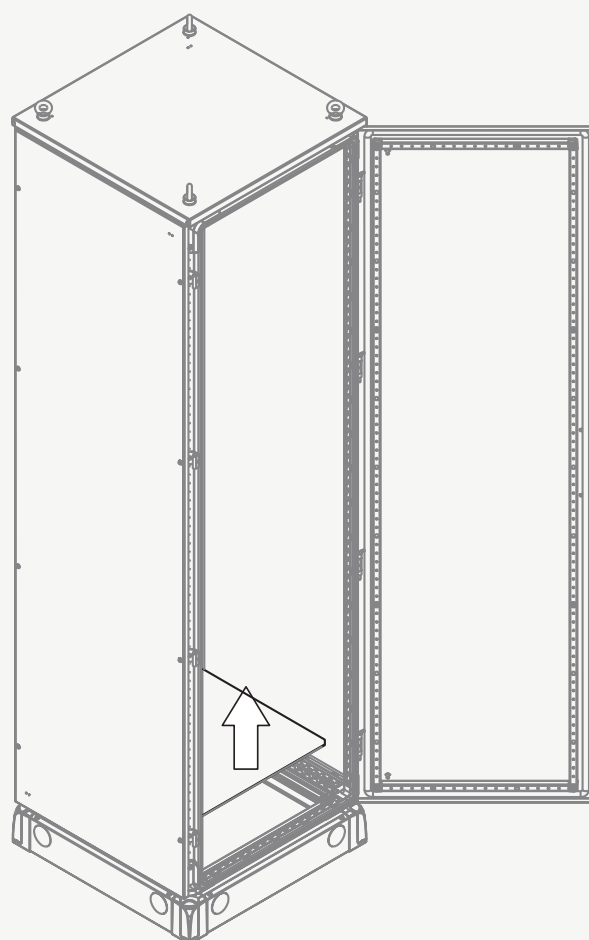


Quick Reference

Gland plate removal	5-1-1
Gland plate installation	5-2-1
Slide bracket location	5-2-3

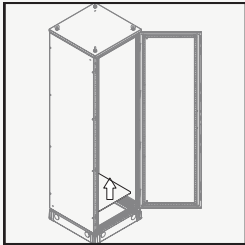

iLINQ Gland Plate Kit

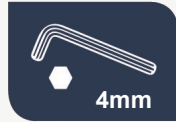


Tools required:




DRQ10018



 DRQ05661



DRV05002

 


DRV05001


Referenced components:

Gland plate removal


5-1-1

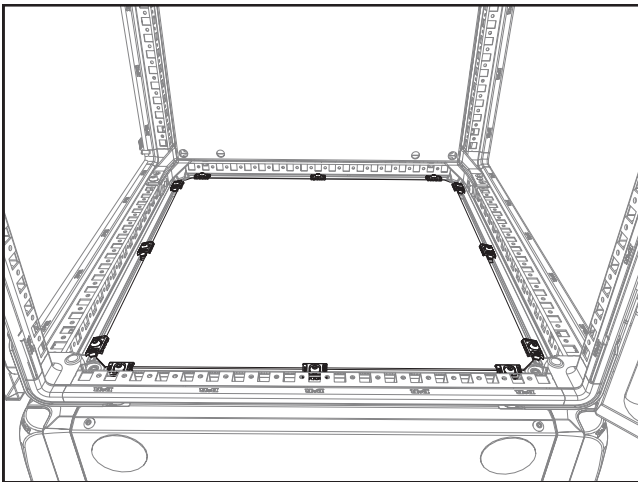


5-1-2

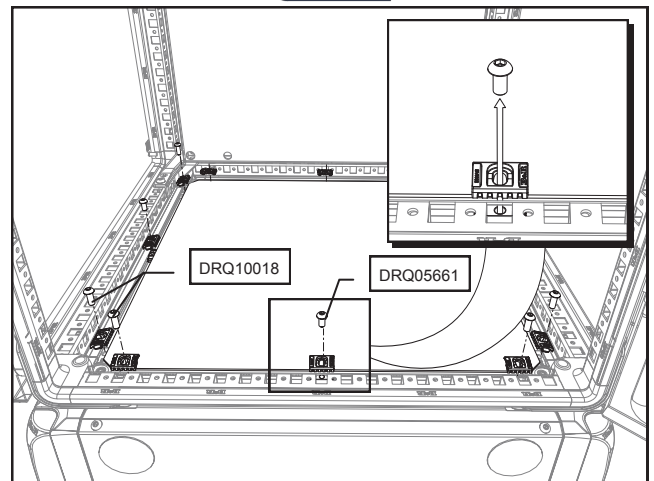

5-1-3

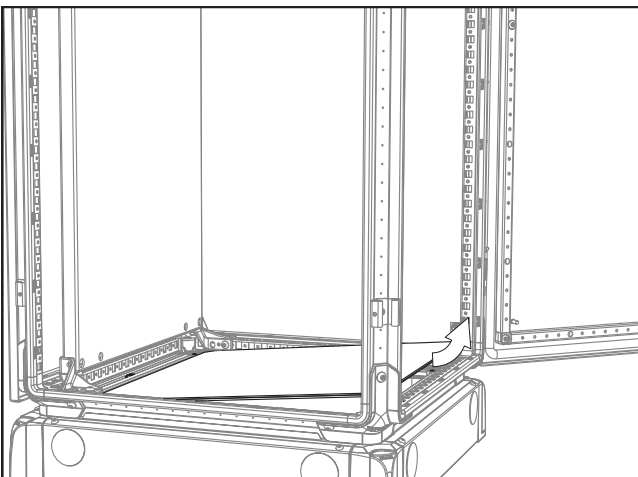

5-1-4

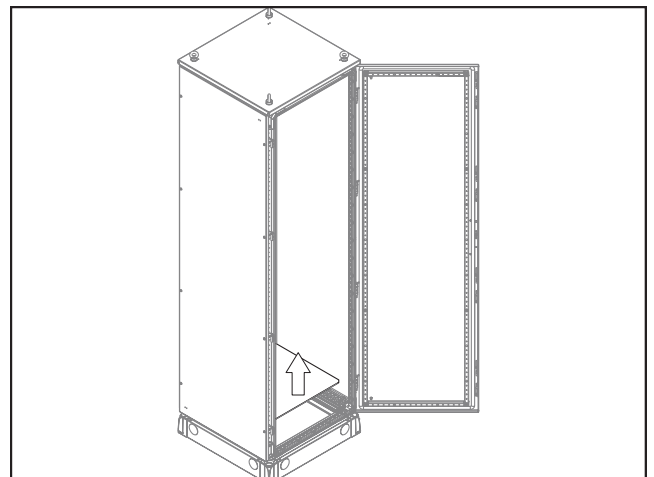

B&R Enclosures Pty Ltd

Head Office 51 Stradbroke Street Heathwood QLD 4110 Australia


T: 1300 Enclosures (1300 362 567) F: 1300 796 599 brenclosures.com.au

KLE10026A


Gland plate installation



5-2-1

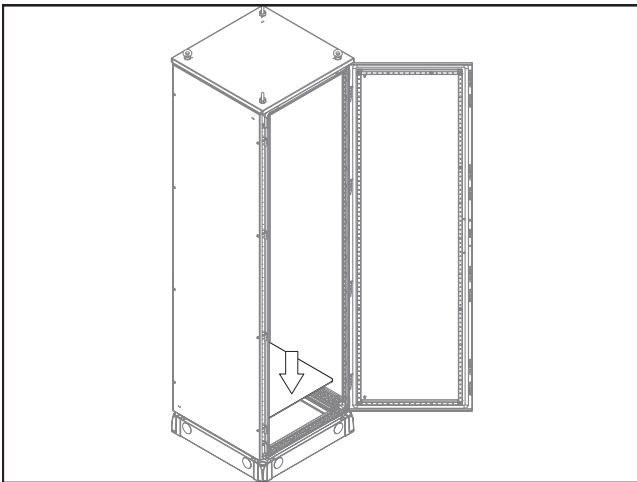


5-2-2

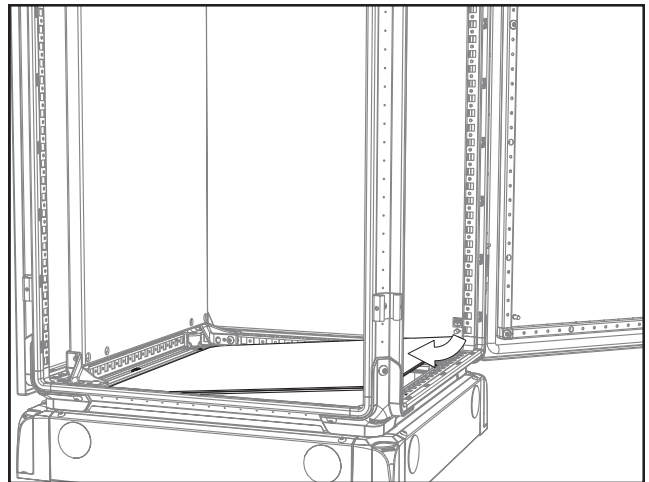


5-2-3

600mm wide or less


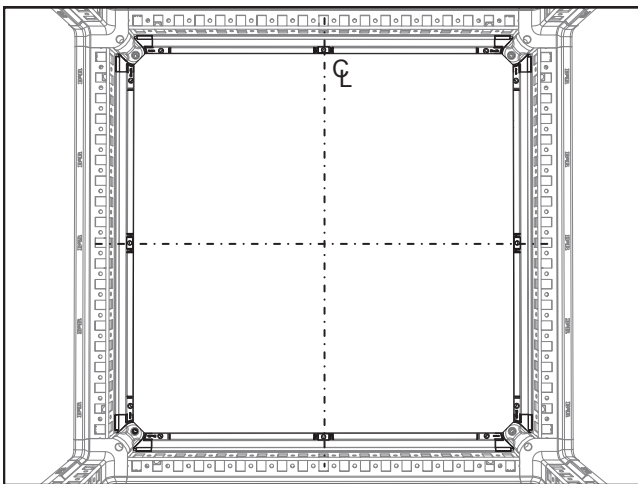


5-2-4

800mm wide or greater

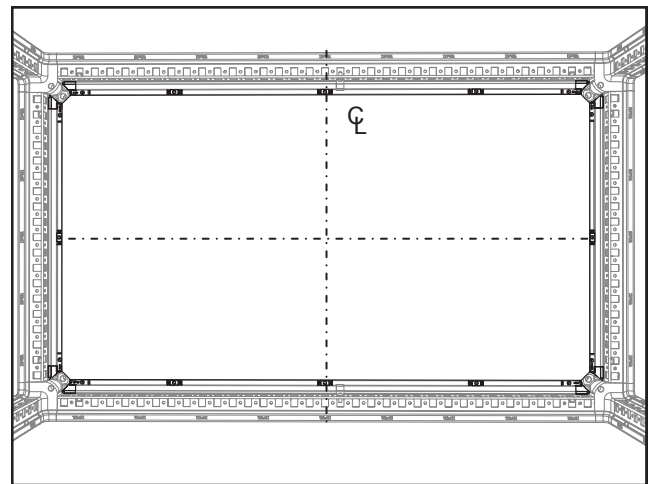

5-2-5

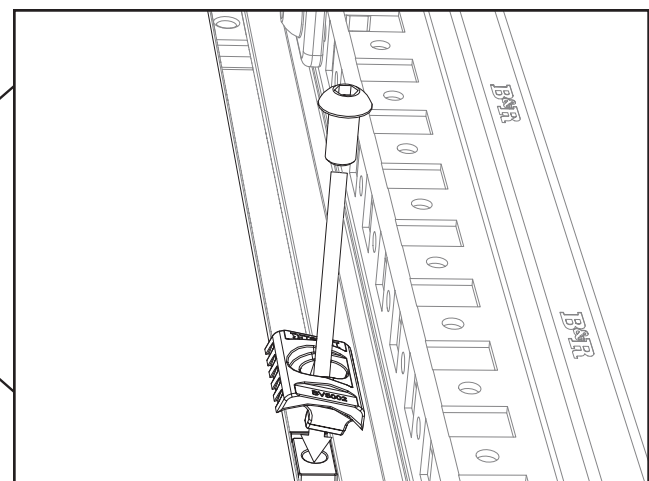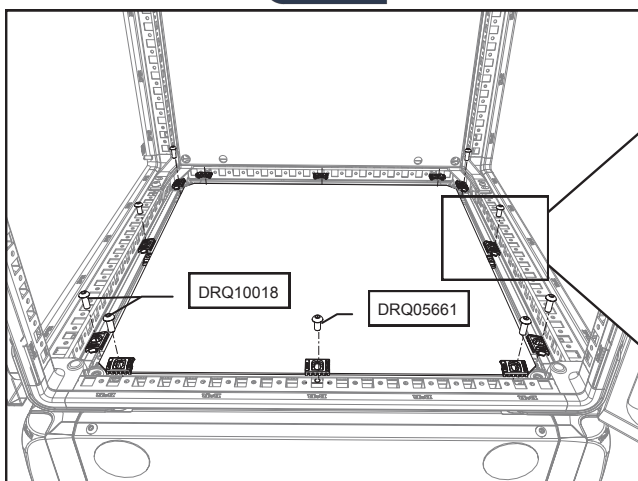



National Sales

T: 1300 Enclosures (1300 362 567)
brenclosures.com.au

Head Office

51 Stradbroke Street Heathwood QLD 4110 Australia
PO Box 1151 Browns Plains BC QLD 4118 Australia
T: +61 7 3714 1000

QLD Office—Sales & Warehouse

51 Stradbroke Street Heathwood QLD 4110 Australia
PO Box 1151 Browns Plains BC QLD 4118 Australia
T: +61 7 3714 1000

North QLD Office - Sales & Warehouse

Unit 4 / 780 Ingham Road Mount Louisa QLD 4814 Australia
PO Box 7615 Garbutt QLD 4815 Australia
T: +61 7 4727 1900

NSW & ACT Office – Sales & Warehouse

7 Metters Place Wetherill Park NSW 2164 Australia
T: +61 2 9915 9555

VIC & TAS Office – Sales & Warehouse

50-52 Sunmore Close Heatherton VIC 3202 Australia
T: +61 3 9552 0552

SA & NT Office – Sales & Warehouse

505 Grand Junction Way Wingfield SA 5013 Australia
T: +61 8 8417 6222

Northern Territory – Distribution

Jewell Distributors Pty Ltd
Cnr Hidden Valley & Beaton Roads Berrimah NT 0828 Australia
T: +61 8 8947 0870

WA Office – Sales & Warehouse

6 Montgomery Way Malaga WA 6090 Australia
T: +61 8 6310 4777