 



iLINQ LQP : Plinth Kit

Assembly Manual


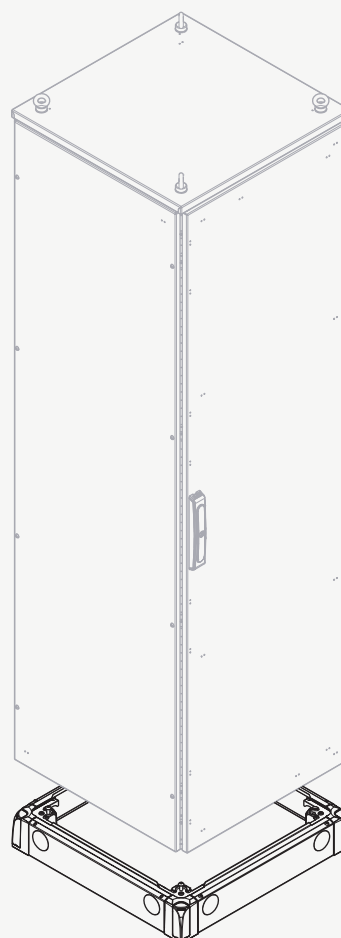


Quick Reference


Corner feet assembly	17-1-1
Corner feet fitting to frame	17-2-1
Plinth cladding fitting	17-3-1
Site installation & levelling	17-4-1
Surface mounting	17-5-1

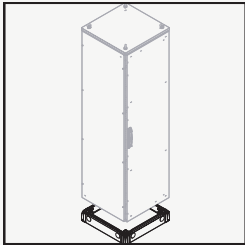 

iLINQ | Plinth kit fitting

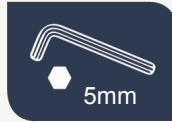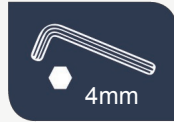  


Tools required:

 


Referenced components:

Corner feet assembly

 
17-1-1

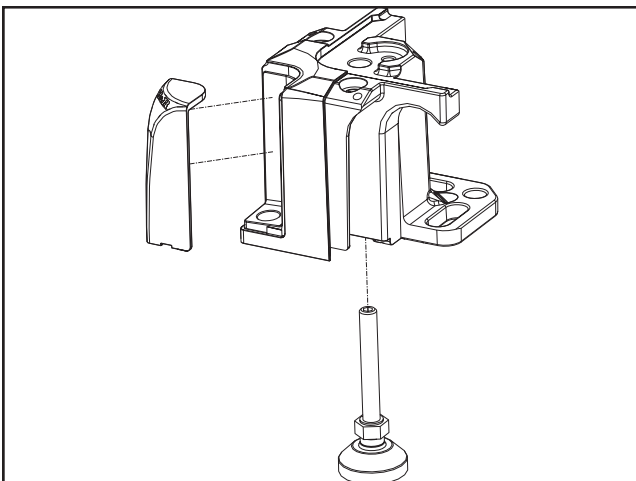


17-1-2

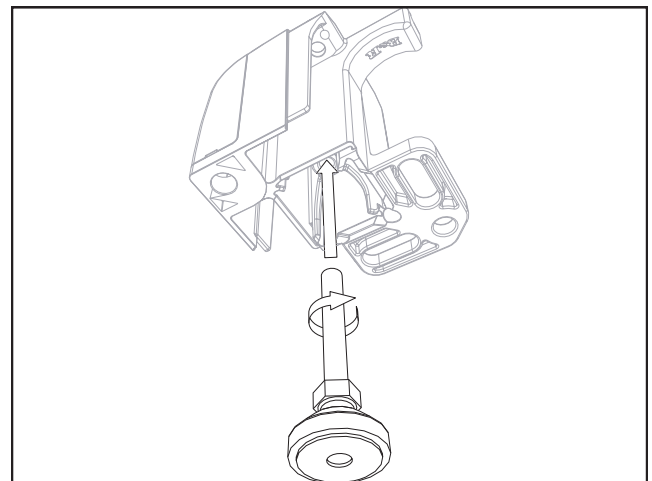 

17-1-3

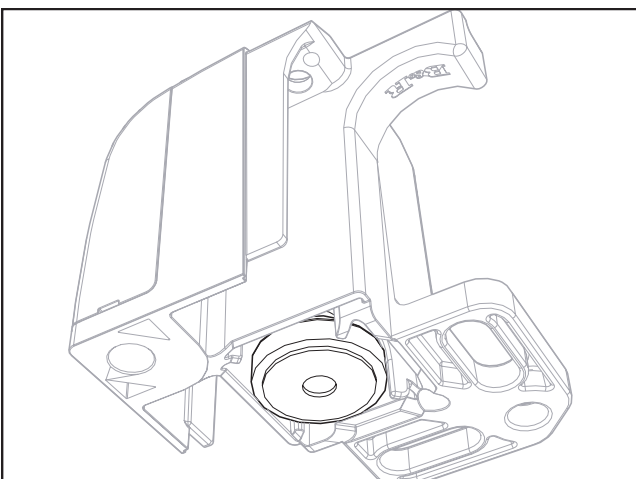 


17-1-4

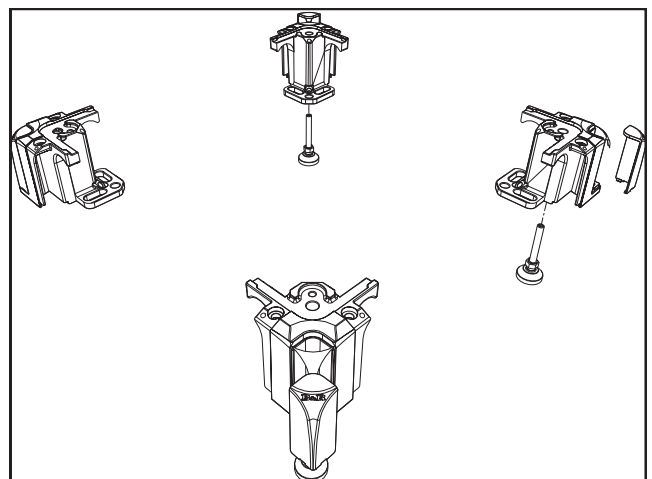 

Corner feet setup




 17-1-5

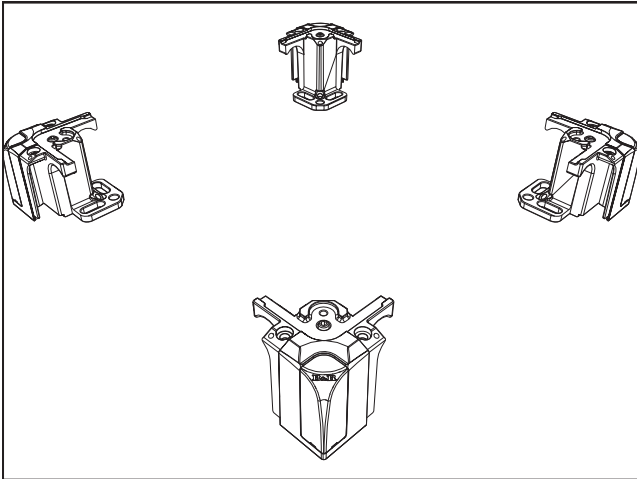


Corner feet fitting to frame

 
17-2-1

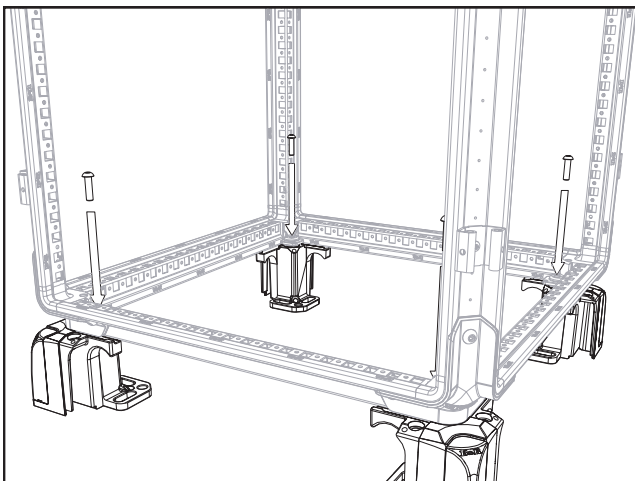


17-2-2

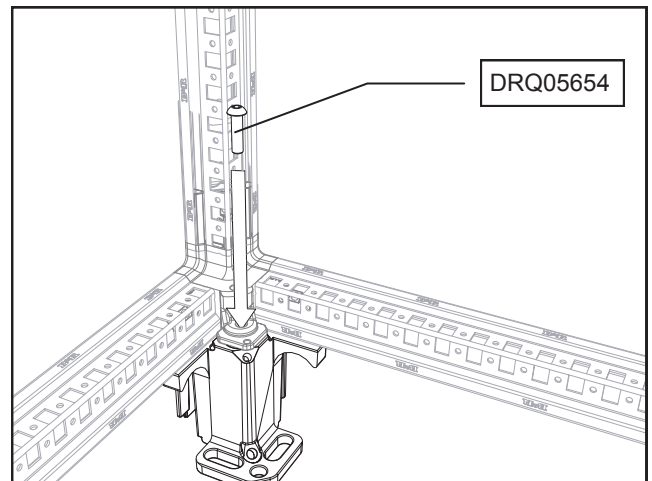 

17-2-3

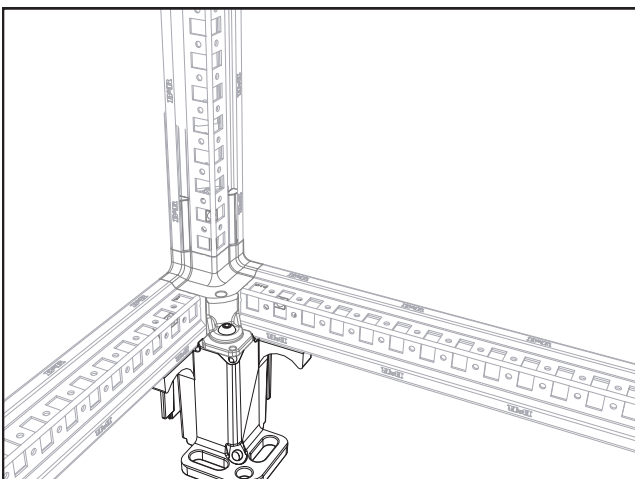 


17-2-4

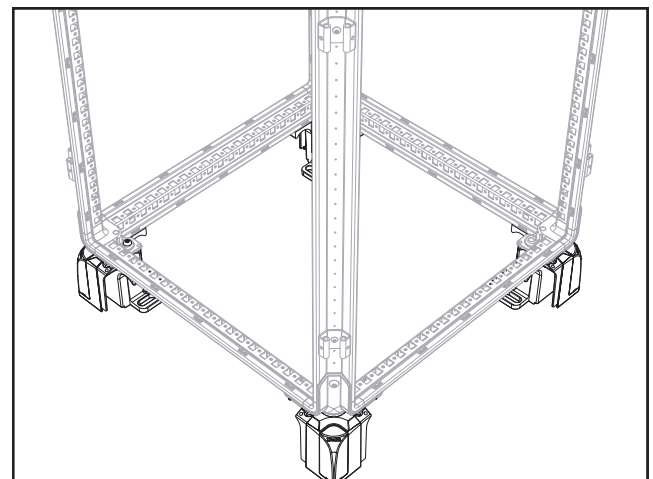 


Plinth cladding fitting



 
17-3-1

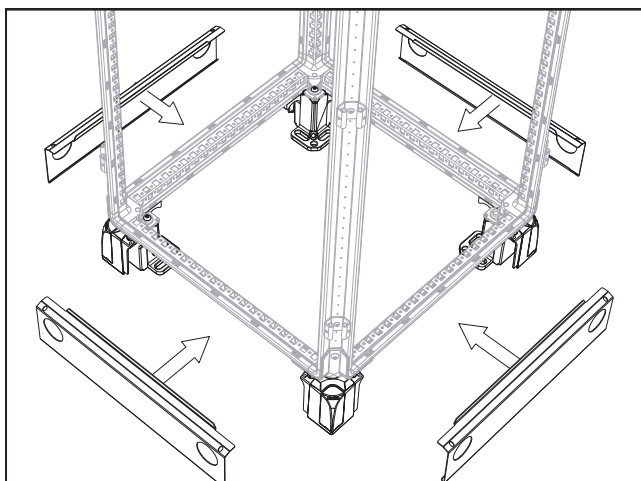


17-3-2

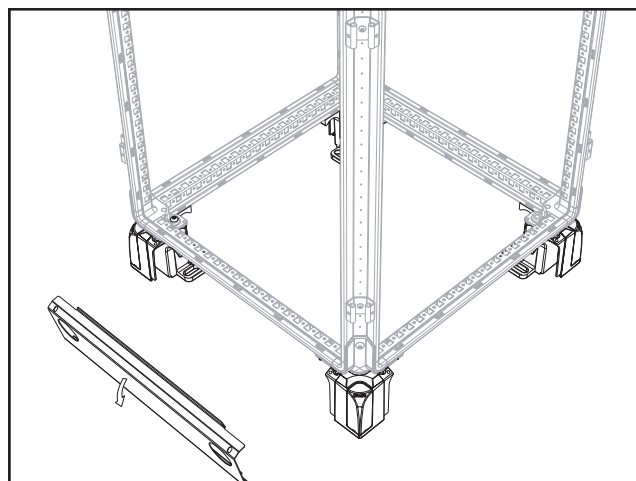 


17-3-3

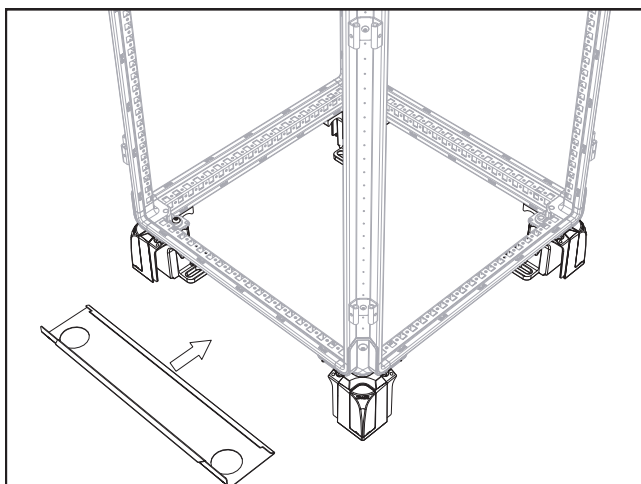 


17-3-4

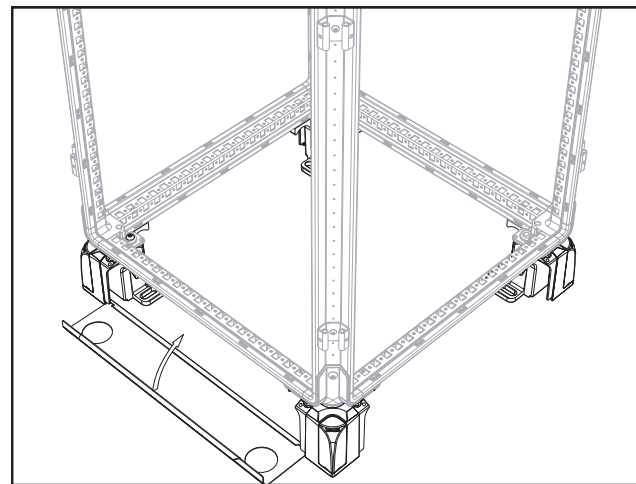 

17-3-5

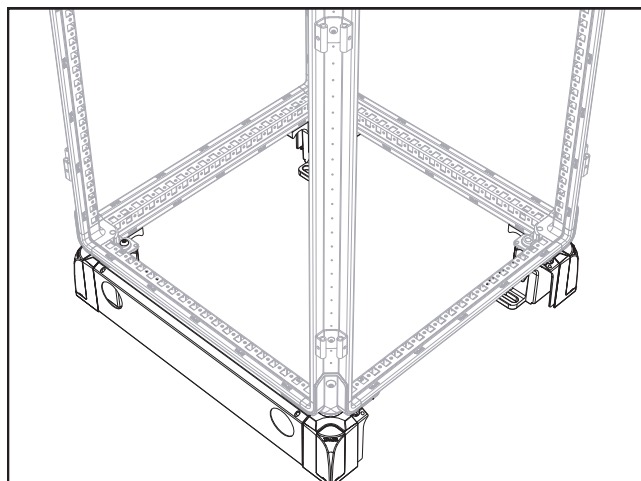 


17-3-6

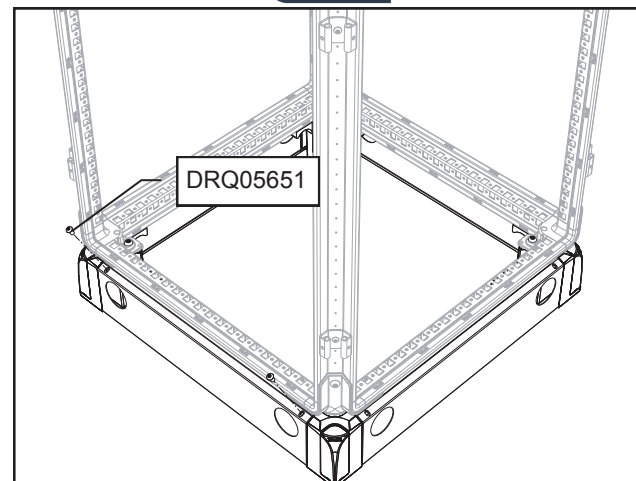 


Plinth cladding fitting



 
17-3-7

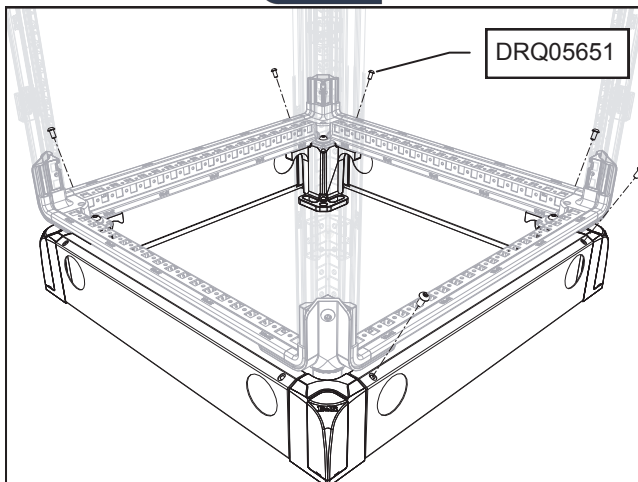


17-3-8

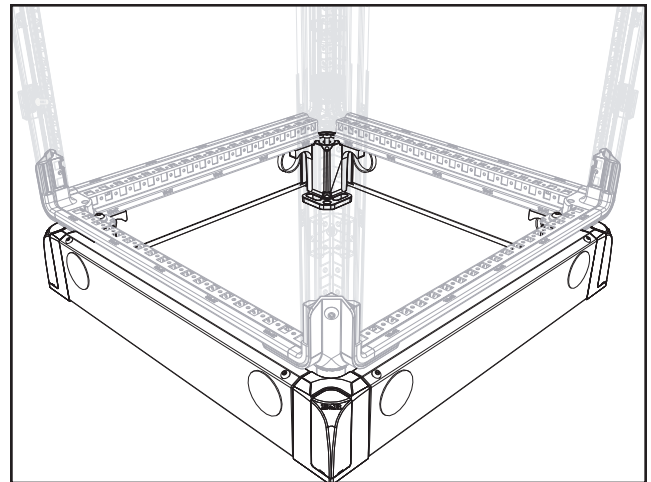 

17-3-9

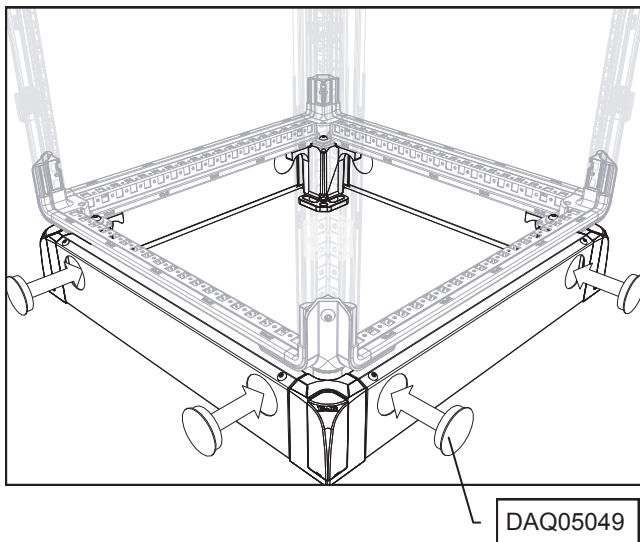 

17-3-10

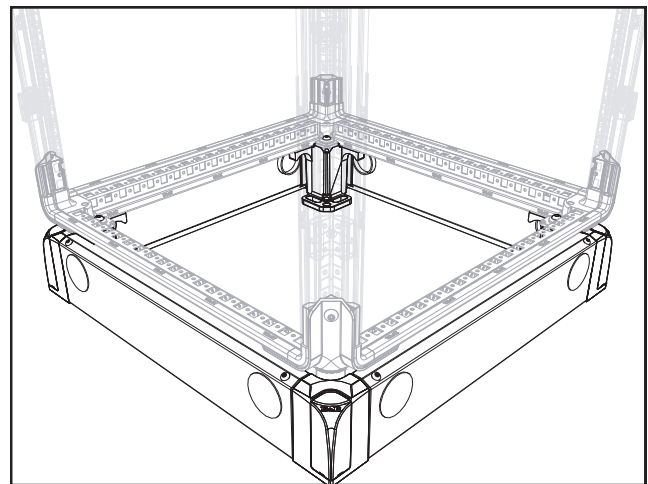 


17-3-11




Site installation—Level surface



 
17-4-1

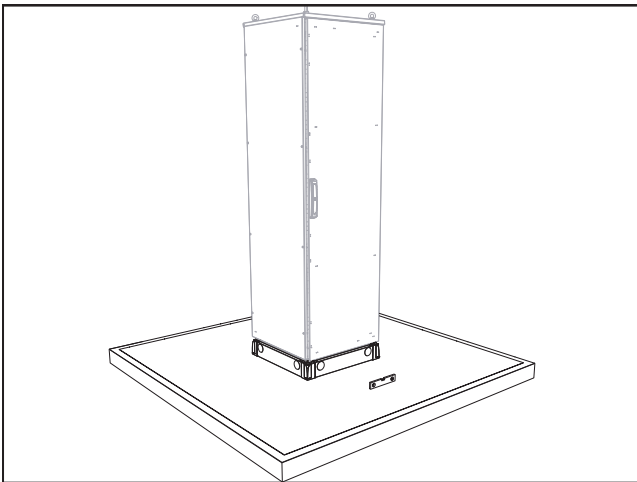

17-4-2

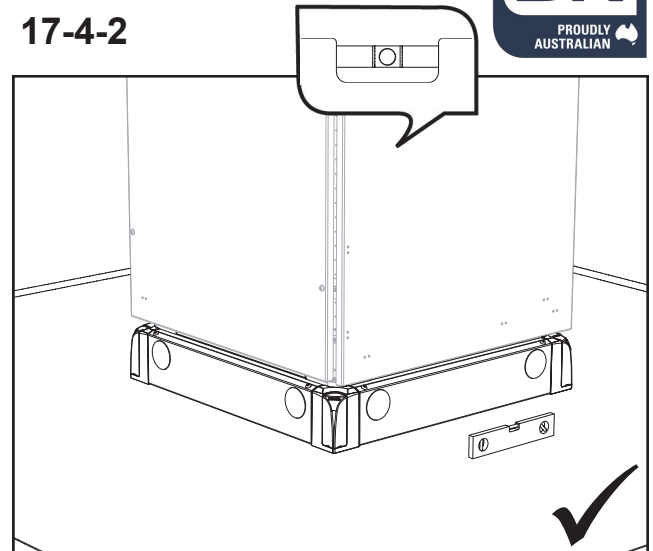 


17-4-3

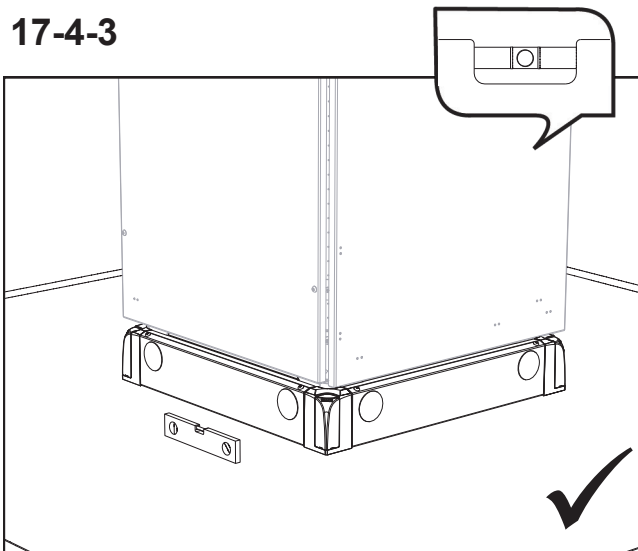 


Site installation—Levelling feet

 17-4-4 Levelling required

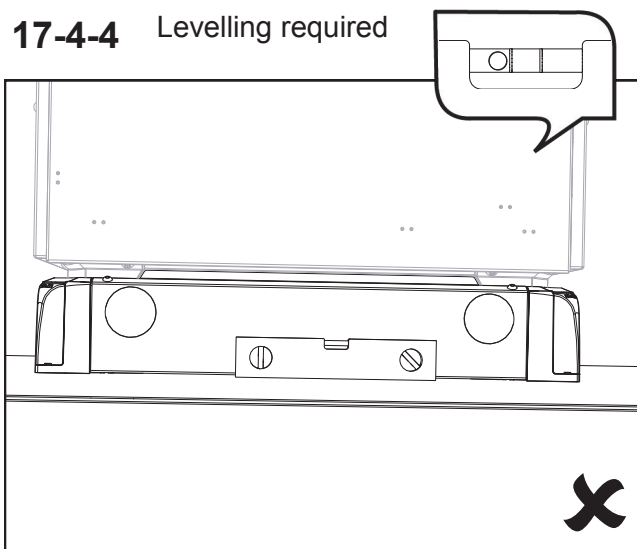


17-4-5

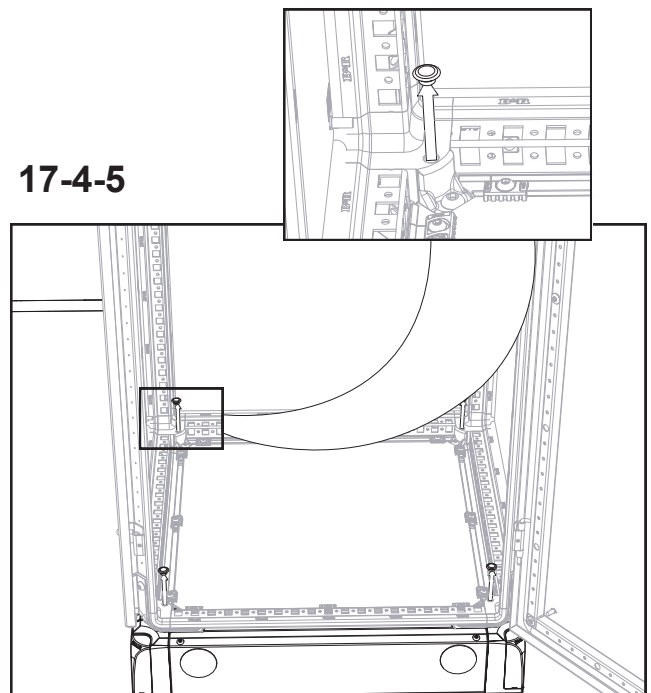 


Site installation—Levelling feet



 
17-4-6

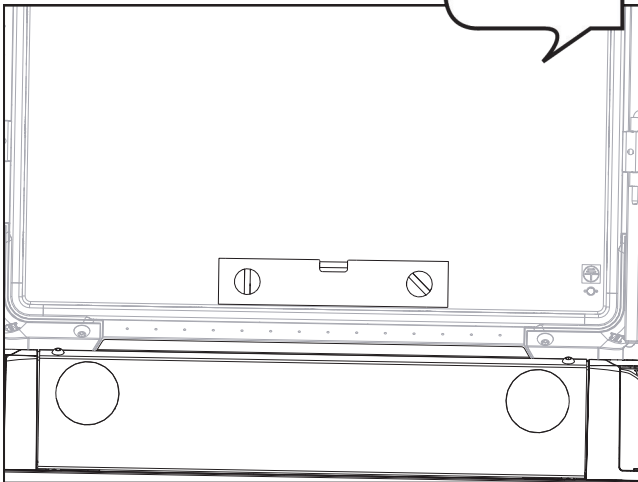


17-4-7

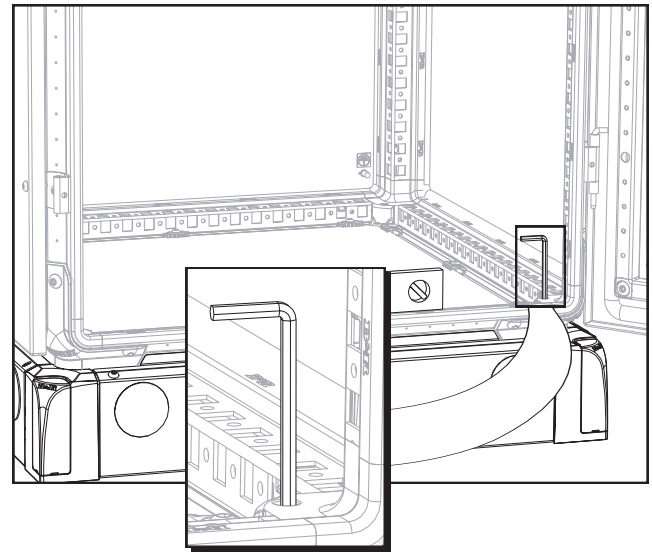 


17-4-8

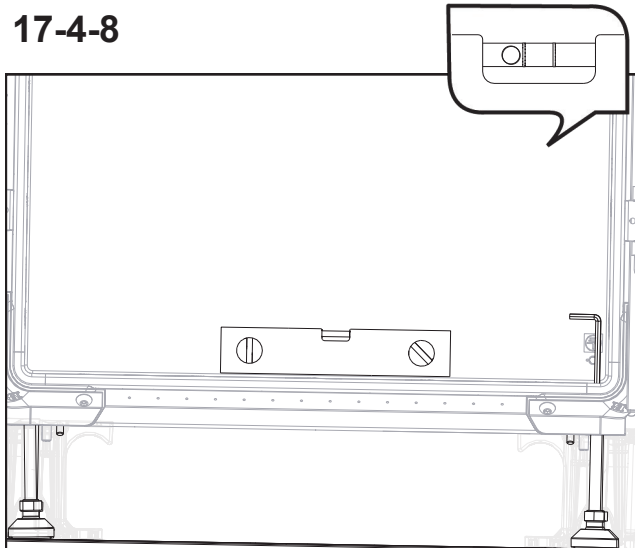 

17-4-9

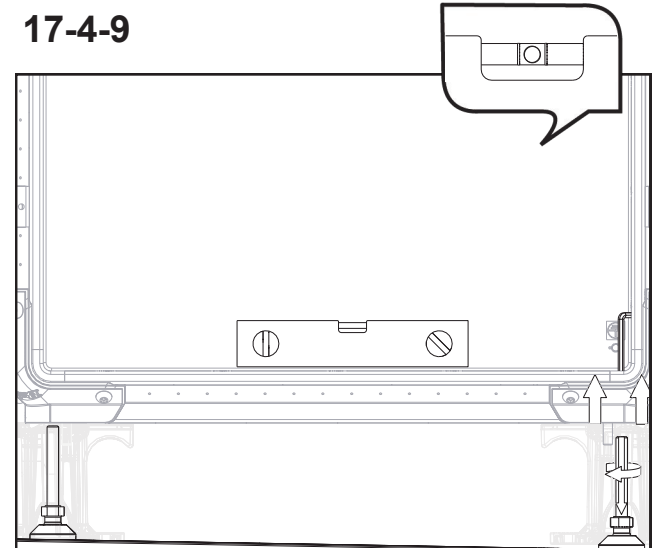 


17-4-10

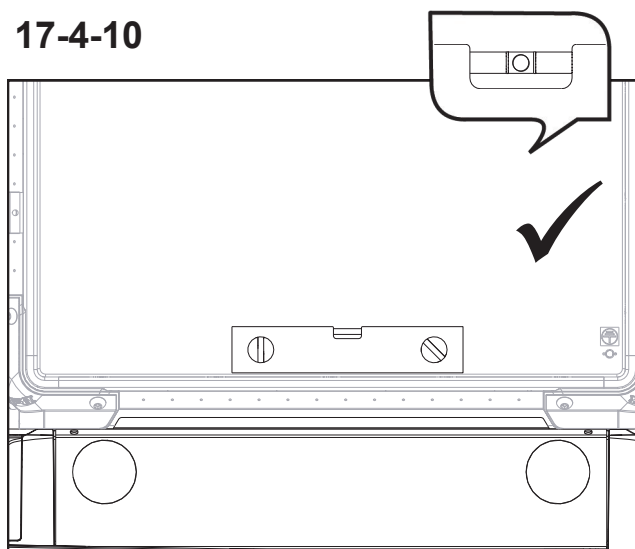 


Site installation – Fix to surface



 
17-5-1

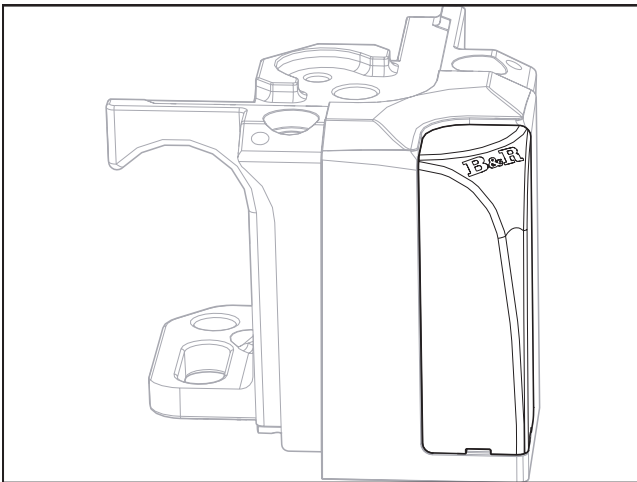


17-5-2

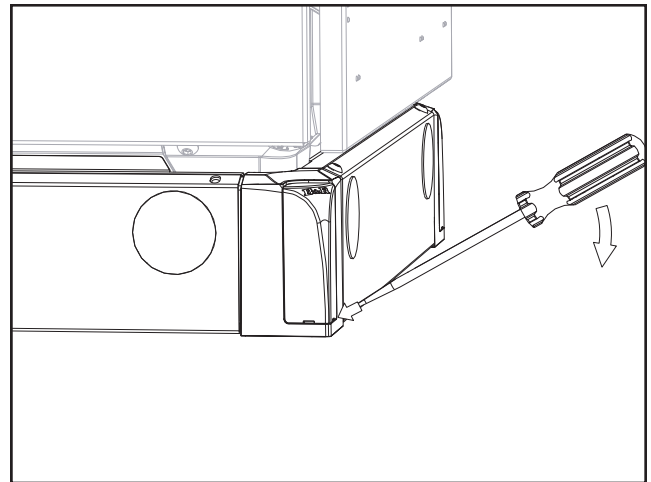 

17-5-3

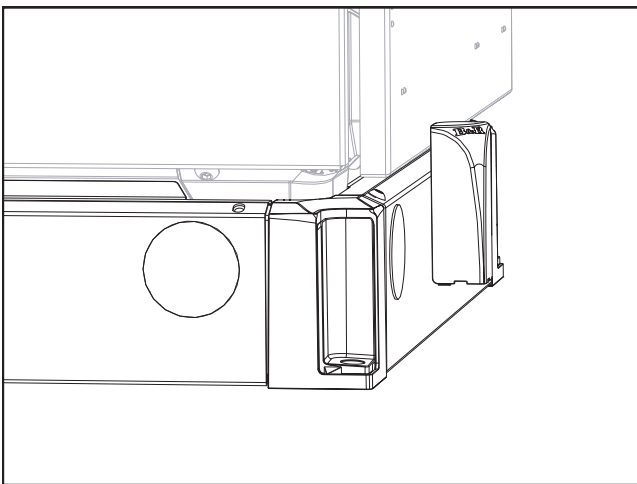 


17-5-4

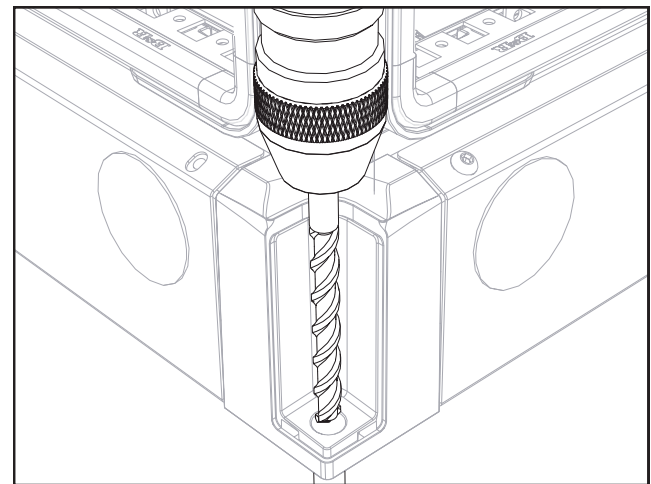 


17-5-5 Choose suitable fixing method

 *ANCHOR BOLT NOT SUPPLIED

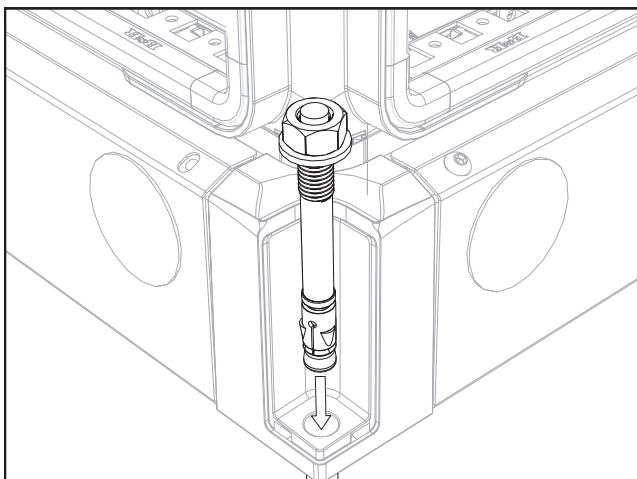


17-5-6

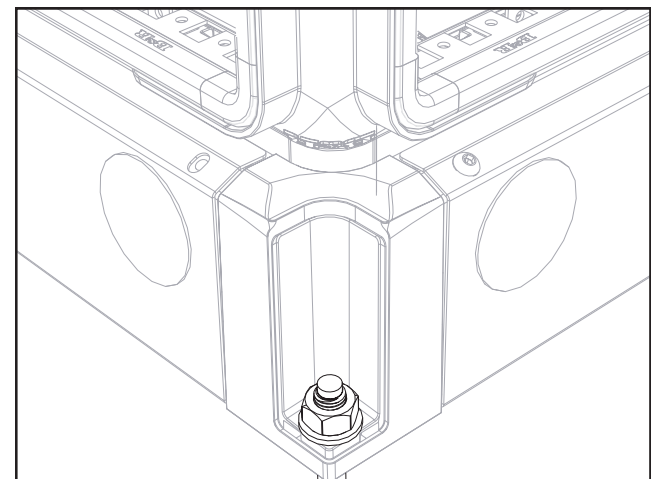 


Site installation—Alternative fixing points



 
17-5-7

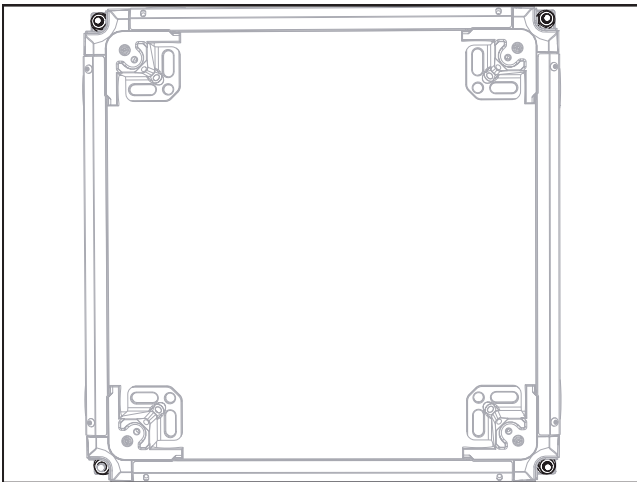


17-5-8 Alternative fixing points

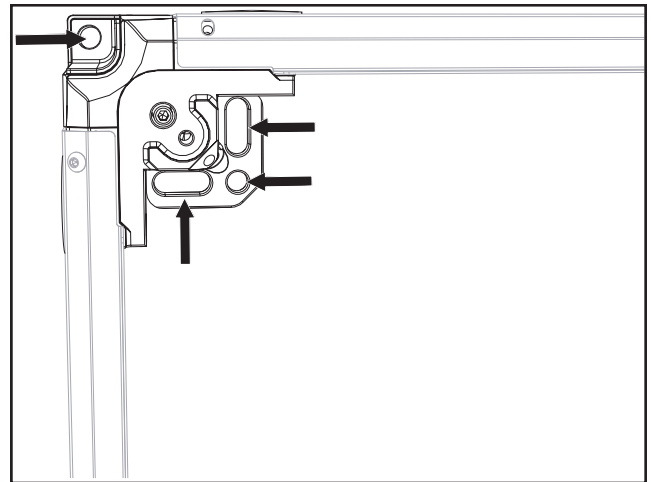 


17-5-9

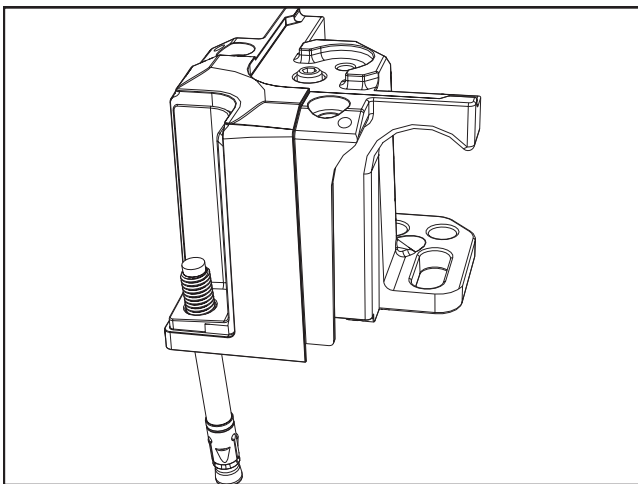 


17-5-10

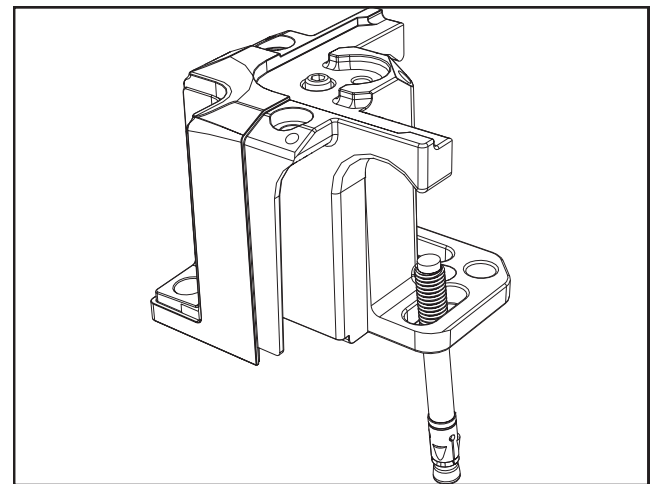 

17-5-11

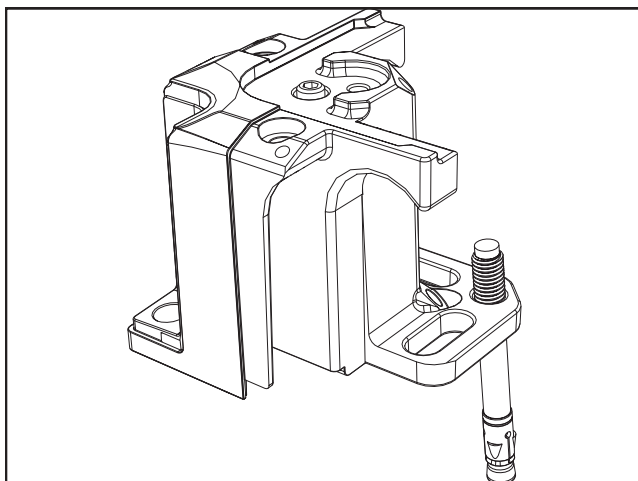 

17-5-12

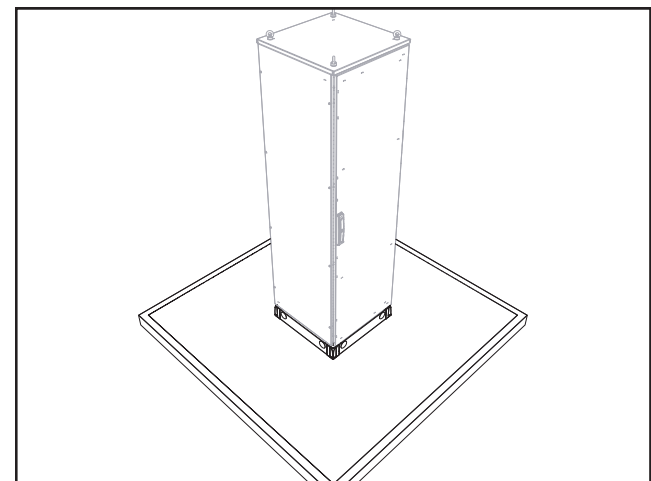 



National Sales

T: 1300 Enclosures (1300 362 567)
brenclosures.com.au

Head Office

51 Stradbroke Street Heathwood QLD 4110 Australia
PO Box 1151 Browns Plains BC QLD 4118 Australia
T: +61 7 3714 1000

QLD Office—Sales & Warehouse

51 Stradbroke Street Heathwood QLD 4110 Australia
PO Box 1151 Browns Plains BC QLD 4118 Australia
T: +61 7 3714 1000

North QLD Office - Sales & Warehouse

Unit 4 / 780 Ingham Road Mount Louisa QLD 4814 Australia
PO Box 7615 Garbutt QLD 4815 Australia
T: +61 7 4727 1900

NSW & ACT Office – Sales & Warehouse

7 Metters Place Wetherill Park NSW 2164 Australia
T: +61 2 9915 9555

VIC & TAS Office – Sales & Warehouse

50-52 Sunmore Close Heatherton VIC 3202 Australia
T: +61 3 9552 0552

SA & NT Office – Sales & Warehouse

505 Grand Junction Way Wingfield SA 5013 Australia
T: +61 8 8417 6222

Northern Territory – Distribution

Jewell Distributors Pty Ltd
Cnr Hidden Valley & Beaton Roads Berrimah NT 0828 Australia
T: +61 8 8947 0870

WA Office – Sales & Warehouse

6 Montgomery Way Malaga WA 6090 Australia
T: +61 8 6310 4777