 


LQSF : LQSF Swing Frame


Assembly Manual

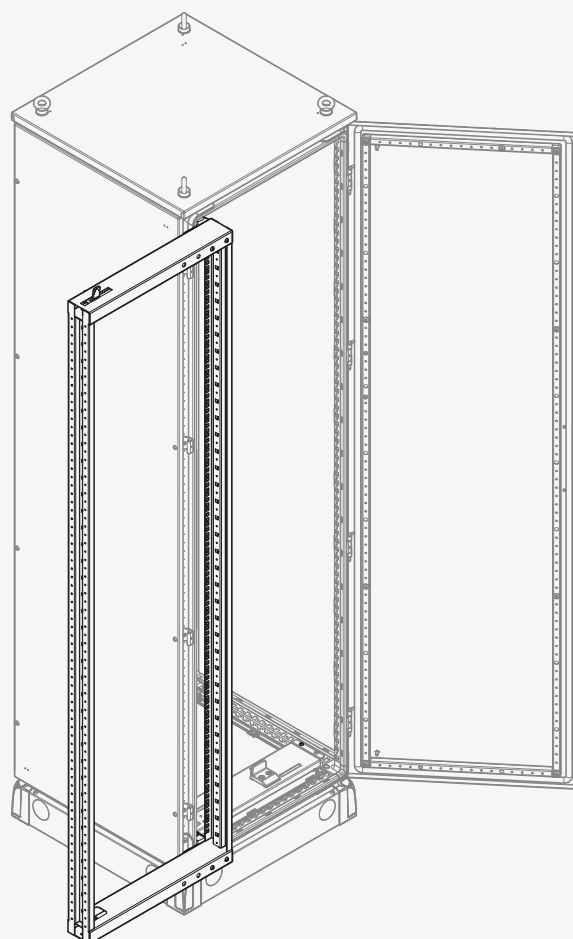


Quick Reference

Components Overview	9-0-1
Fitting Hardware to Swing Frame	9-1-1
Fitting 90-130° Swing Frame	9-2-1
Opening 90-130° Swing Frame	9-3-1
Fitting 180° Swing Frame	9-4-1
Opening 180° Swing Frame	9-5-1
Swapping Hinged Side	9-6-1

 
Note: This document describes the process of fitting a swing frame generally. For instructions on locating & fitting a swing frame to an enclosure 800mm wide or greater, see "Leaflet 9—Swing Frame Trim Kit" (KLE10031).

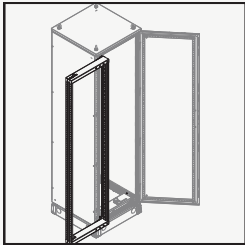


iLINQ Swing Frame

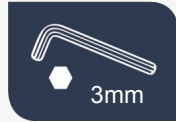 


3mm

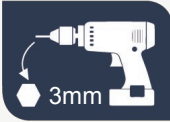 

3mm

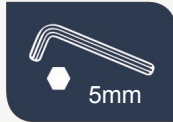 


5mm

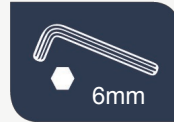 


6mm



 
Tools required:



DRQ05660

 


KBS06640

 

AC6045



 KBS10143

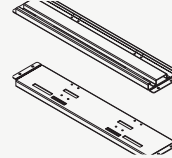

KCA10015




AC602


Referenced components:

Components Overview

 
9-0-1

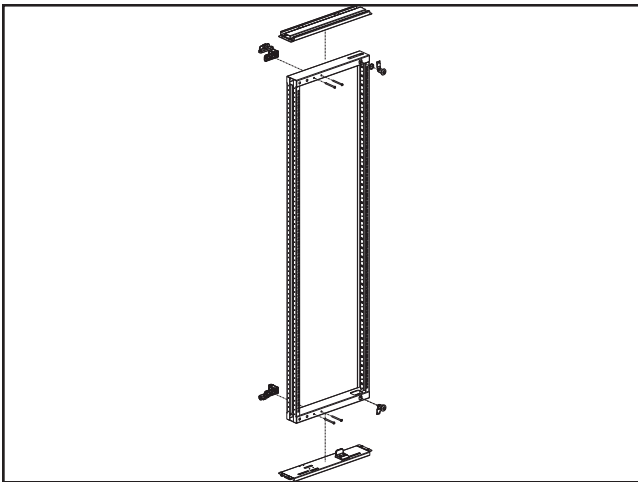

9-0-2

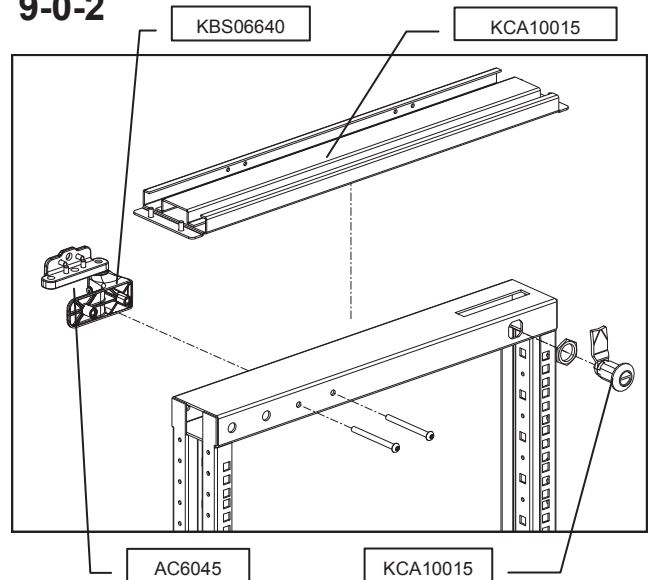 


9-0-3

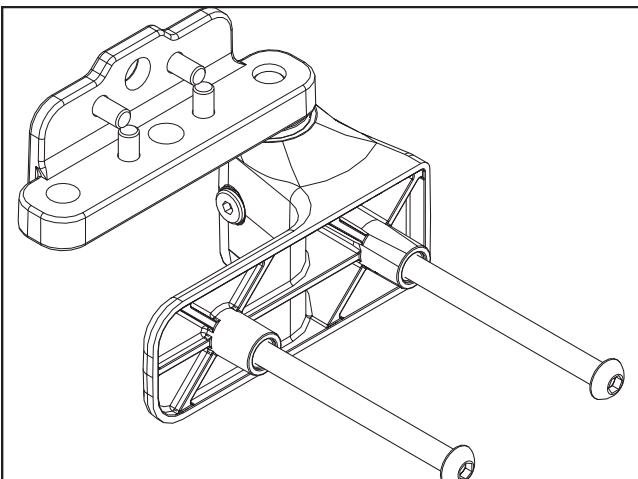 

9-0-4

 Top Hinge KBS06640

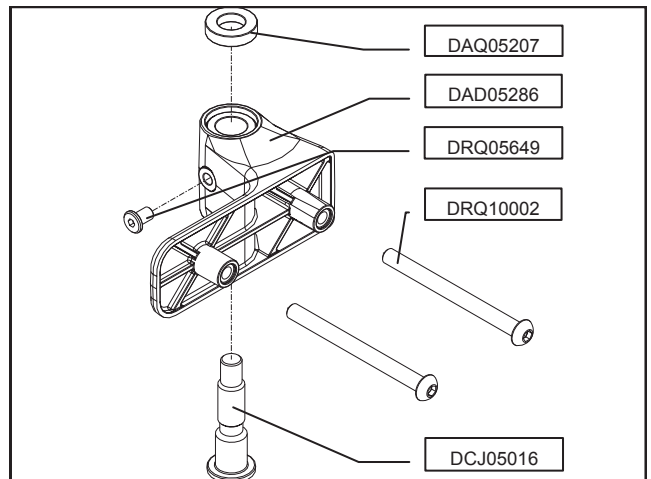

B&R Enclosures Pty Ltd

Head Office 51 Stradbroke Street Heathwood QLD 4110 Australia


T: 1300 Enclosures (1300 362 567) F: 1300 796 599 brenclosures.com.au

KLE10030A


Components Overview



 
9-0-5 Bottom Hinge KBS06640

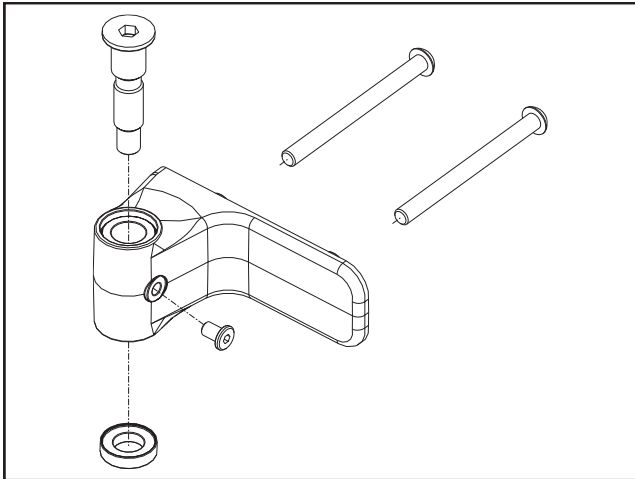


9-0-6

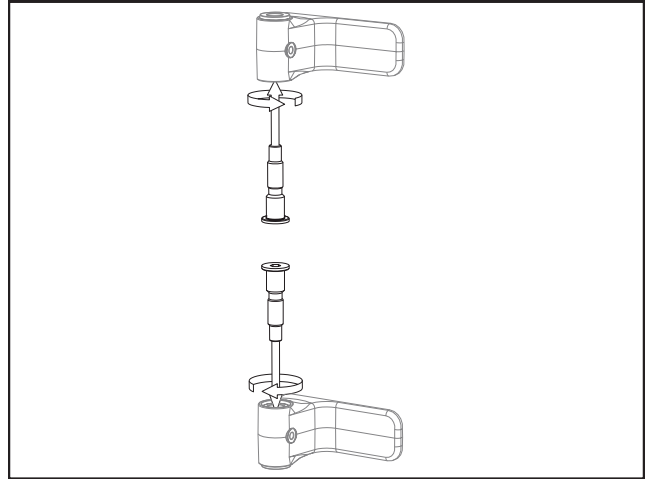 


9-0-7

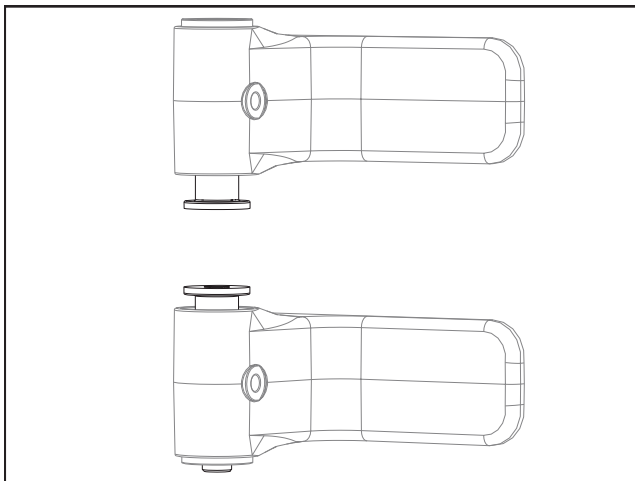 


9-0-8 Pivot Mount AC6045

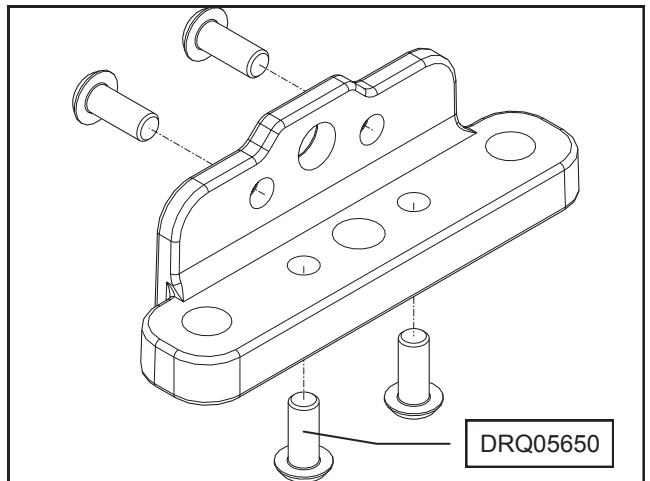 


9-0-9 Top Rail KCA10015

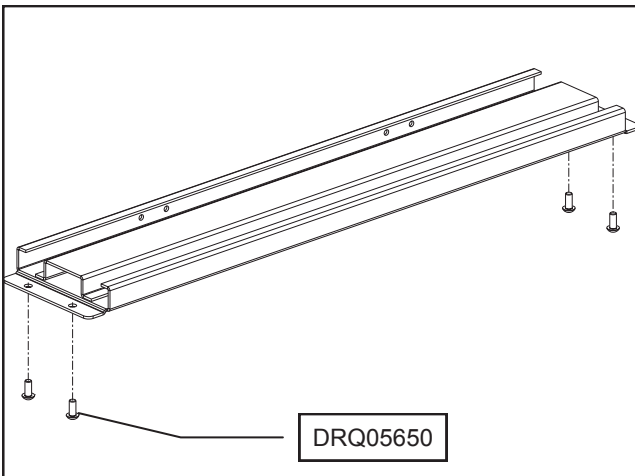 


9-0-10 Bottom Rail KCA10015

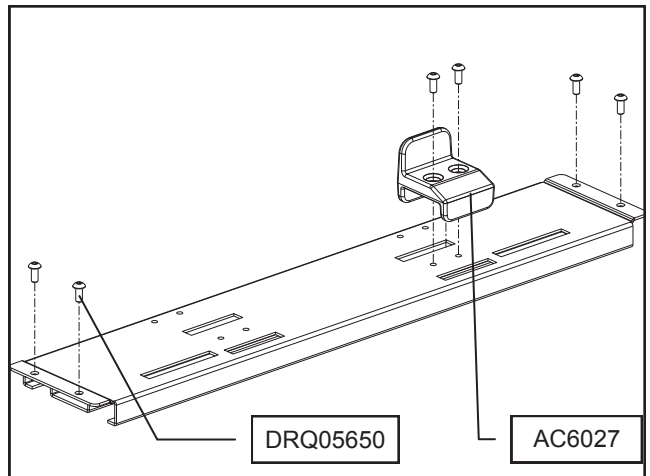 


9-1-1

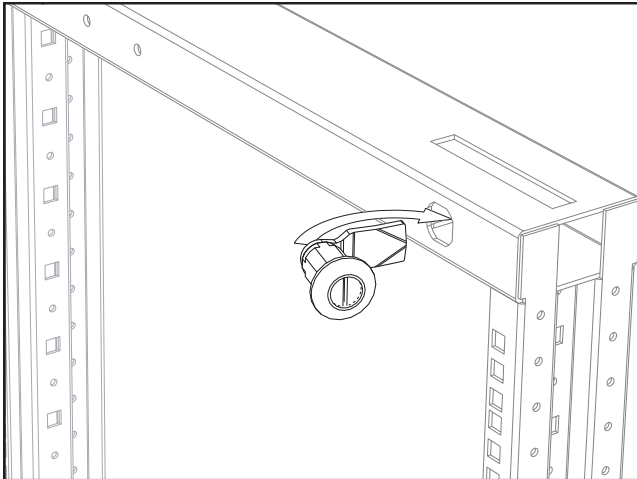 


9-1-2

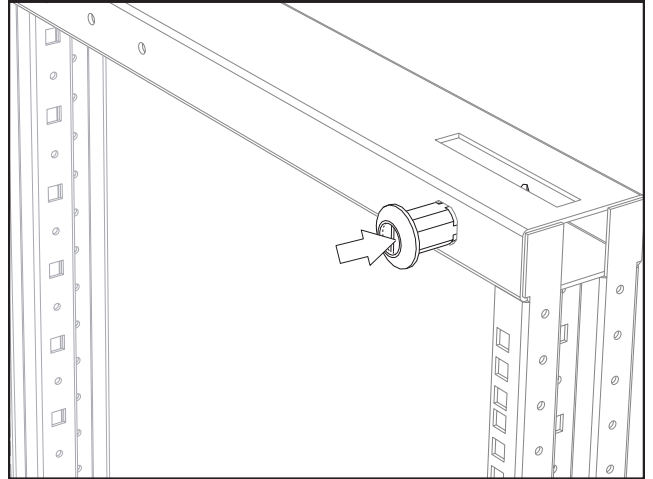 

9-1-3

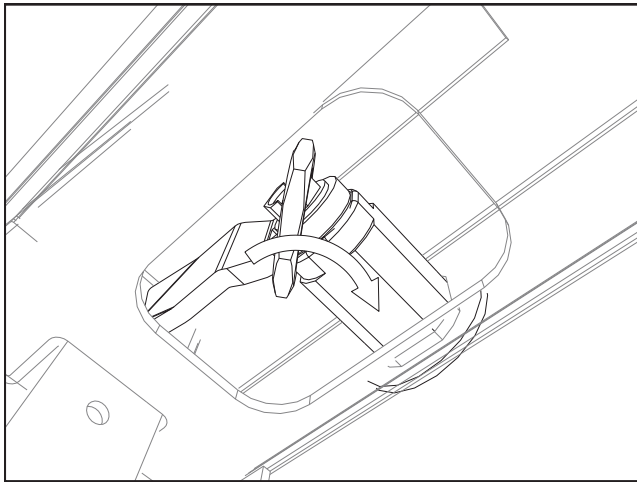 


9-1-4

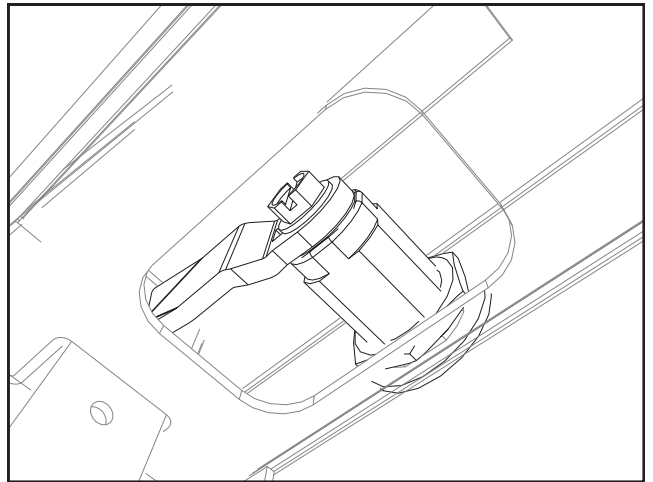 


Installing 90-135° Swing Frame



 
9-2-1

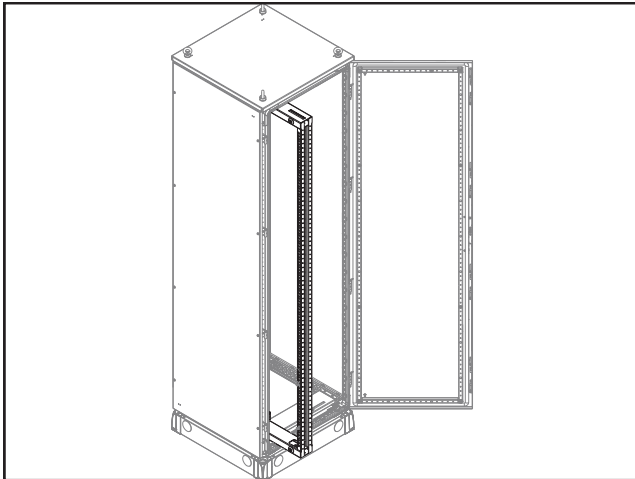


9-2-2

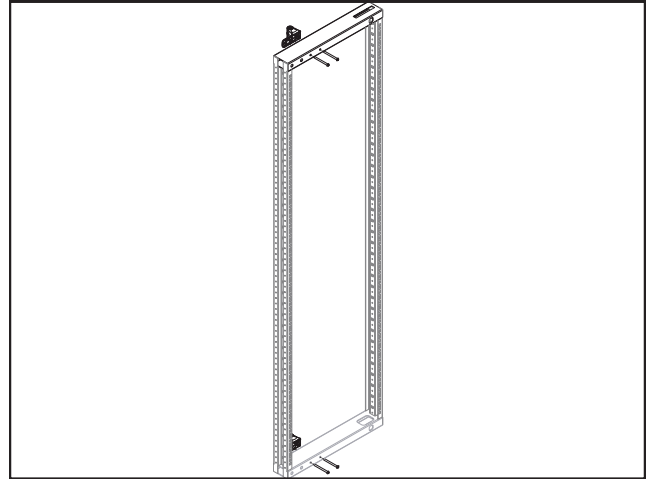 


9-2-3

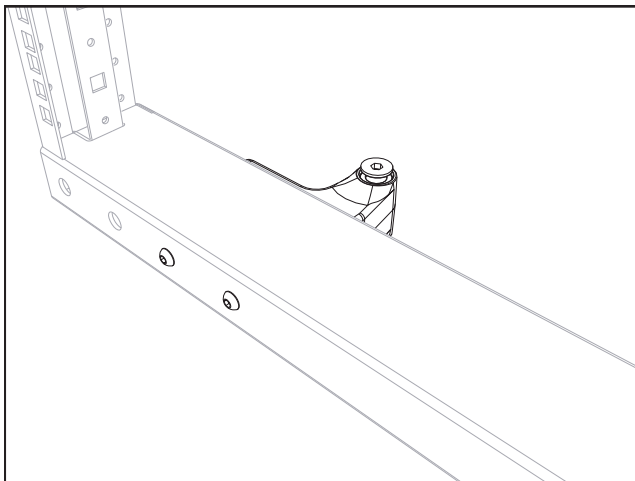 

9-2-4

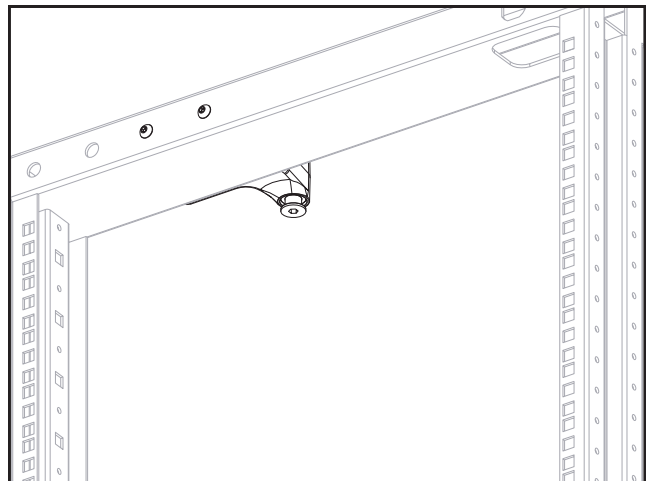 


9-2-5

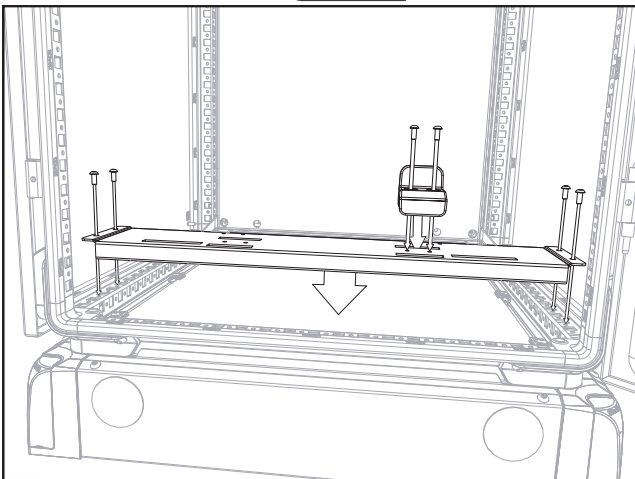 

9-2-6

Select Depth

 
25mm Increments

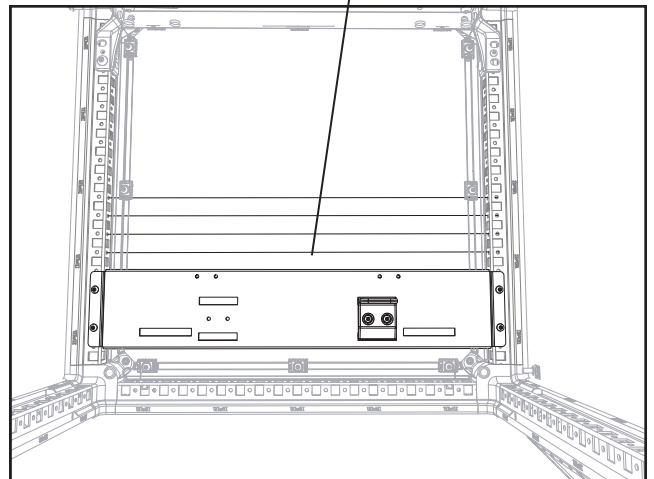

Installing 90-135° Swing Frame




 9-2-7

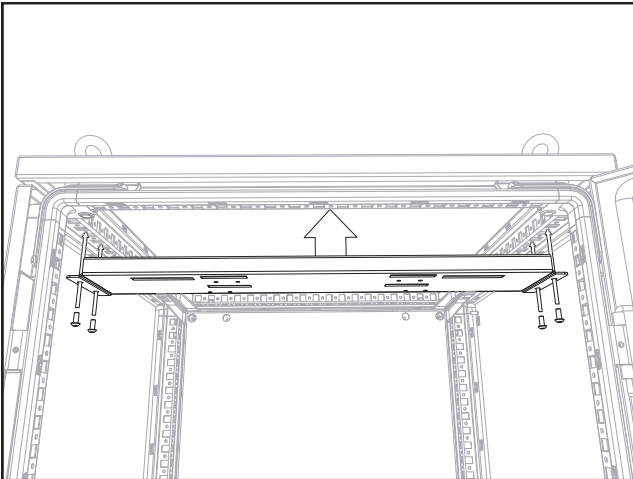


9-2-8

 
Must be same depth as
bottom rail (see 9-2-9)

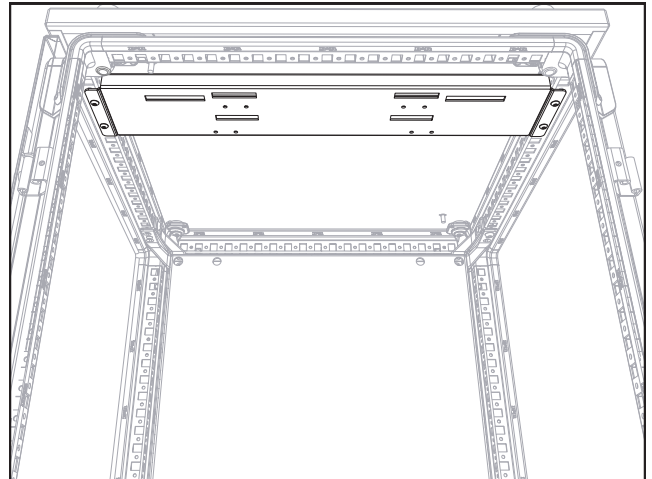


9-2-9

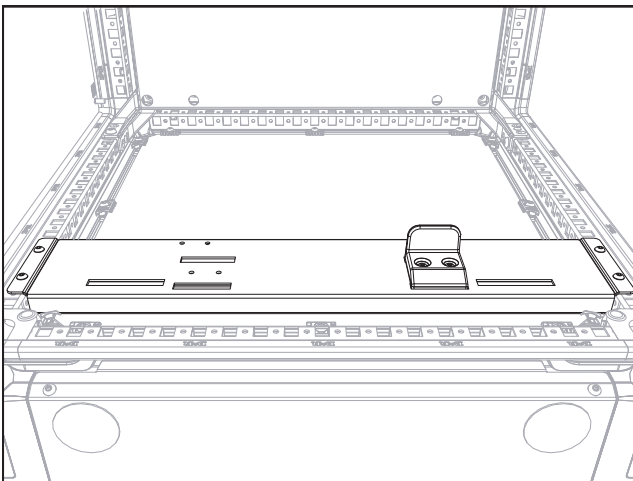 


9-2-10

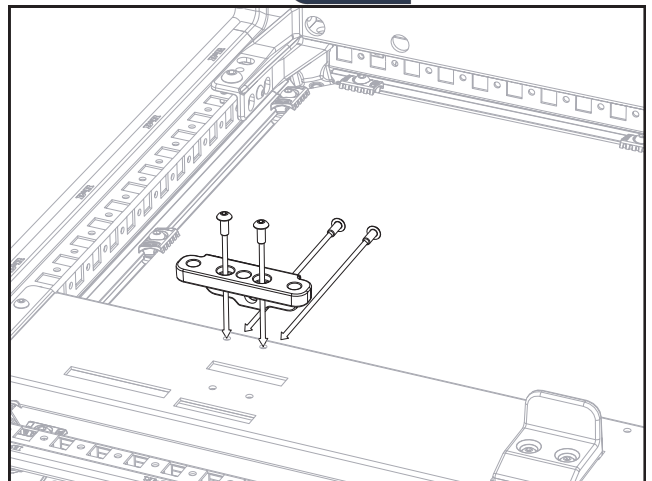 

9-2-11

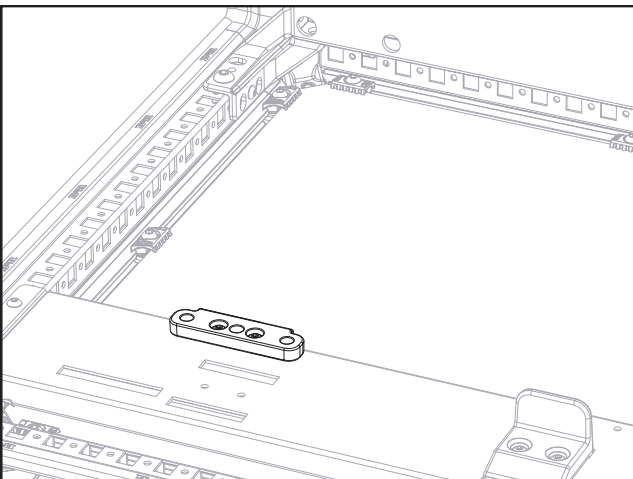 


9-2-12

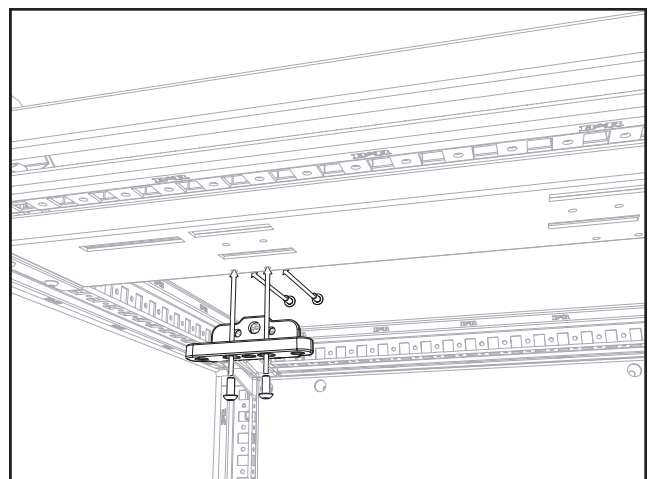 


Installing 90-135° Swing Frame



 
9-2-13

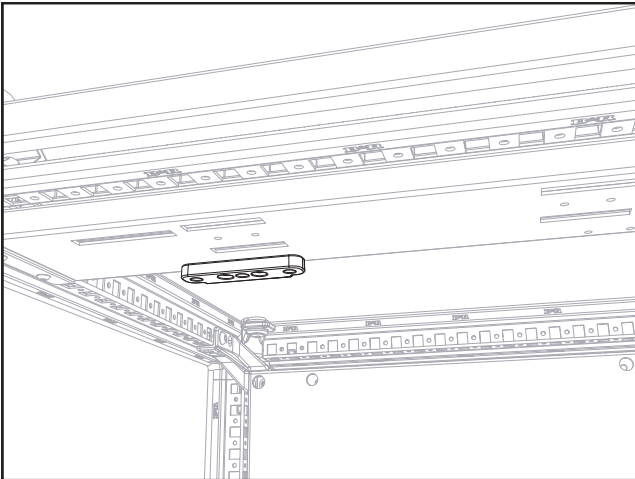


9-2-14

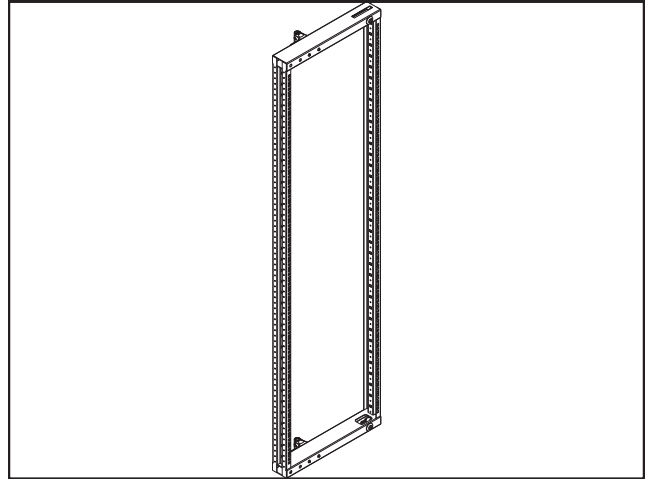 


9-2-15

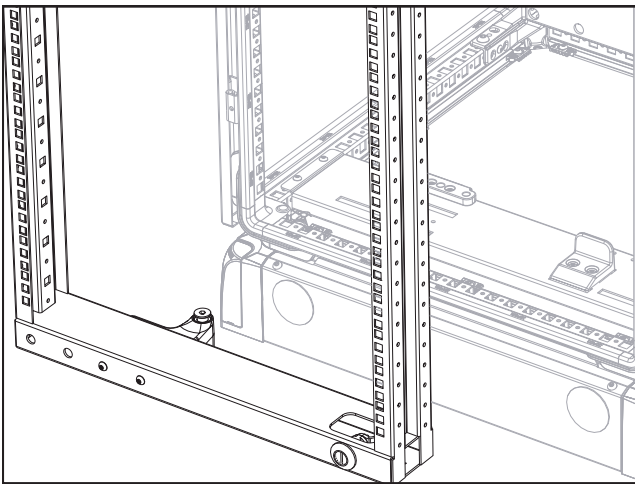 


9-2-16

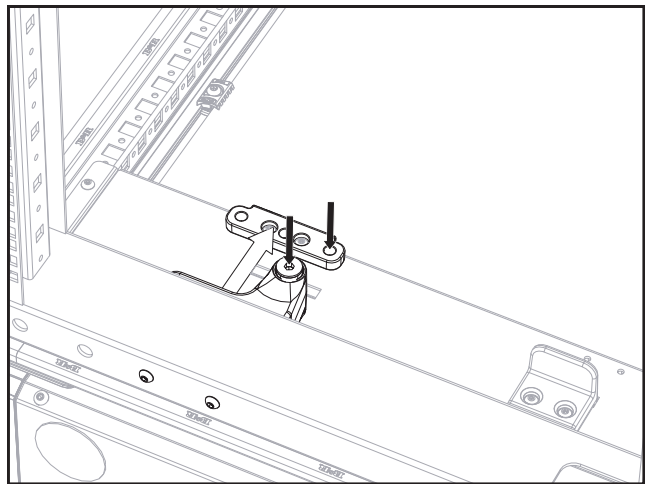 

9-2-17

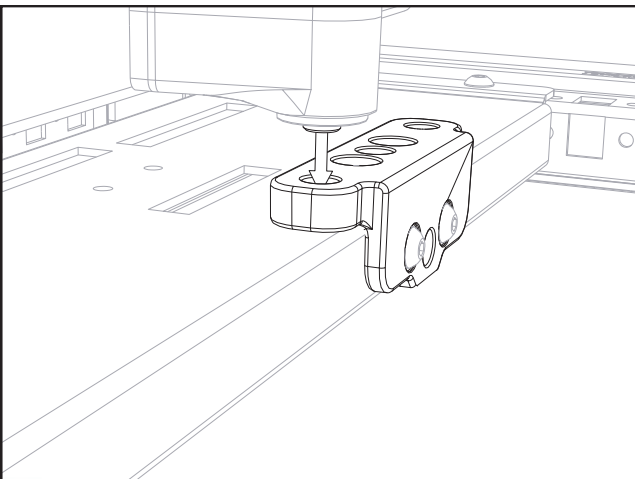 


9-2-18

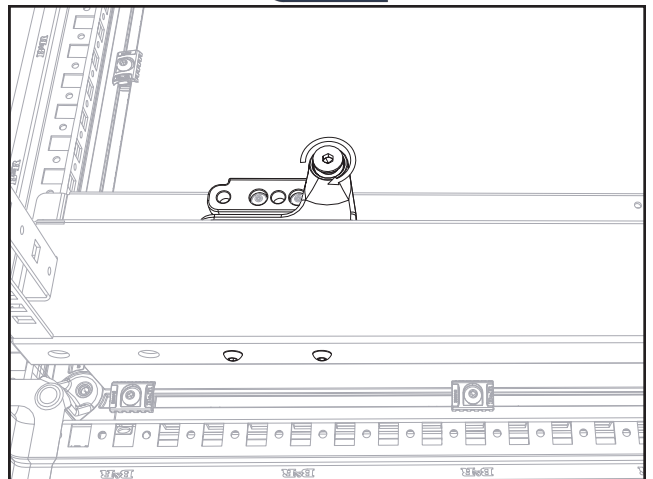 


Installing 90-135° Swing Frame



 
9-2-19

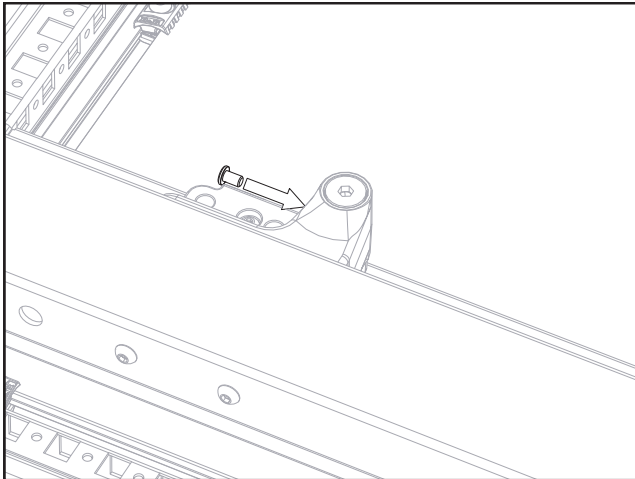


9-2-20

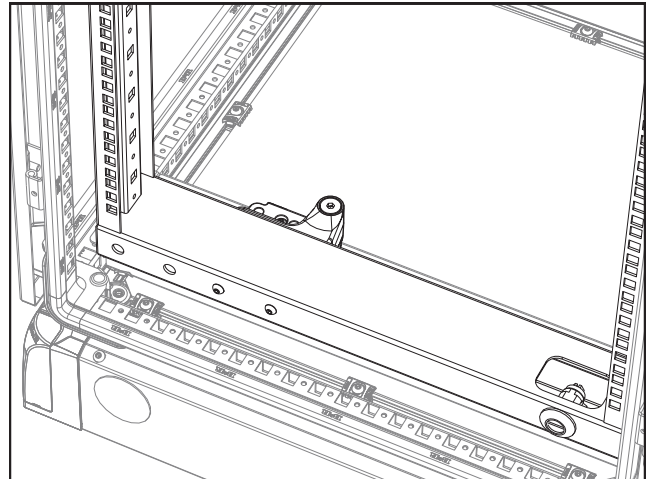 


9-2-21

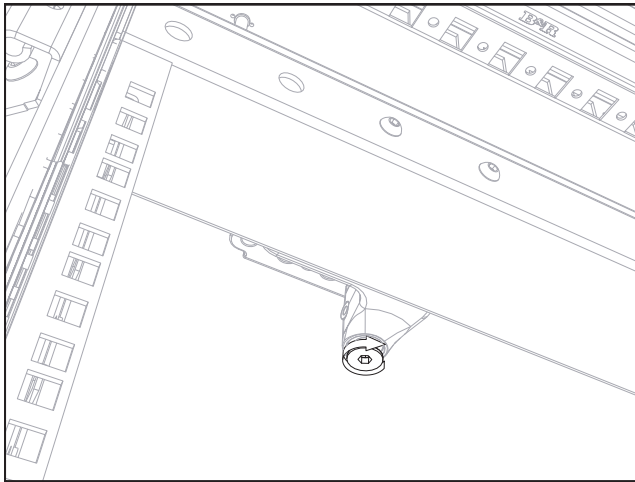 

9-2-22

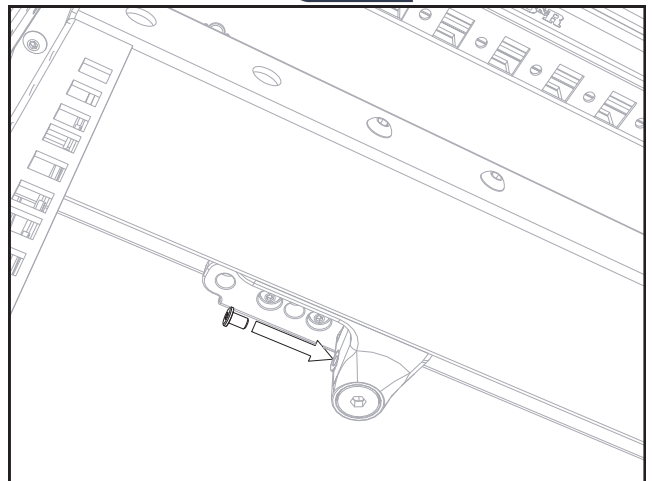 

9-2-23

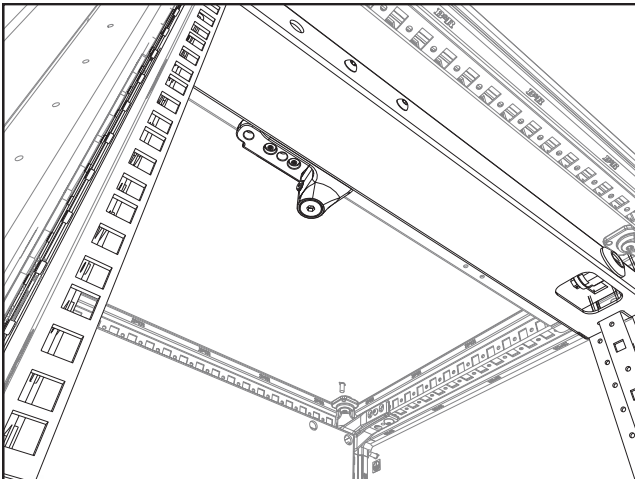 


9-2-24




Installing 90-135° Swing Frame



 9-2-25

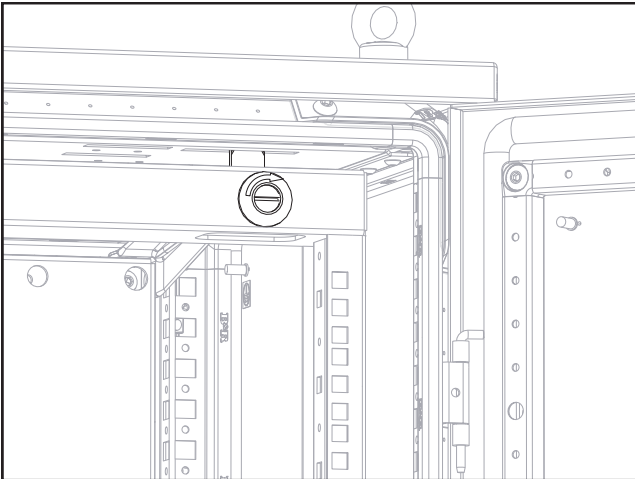

9-2-26

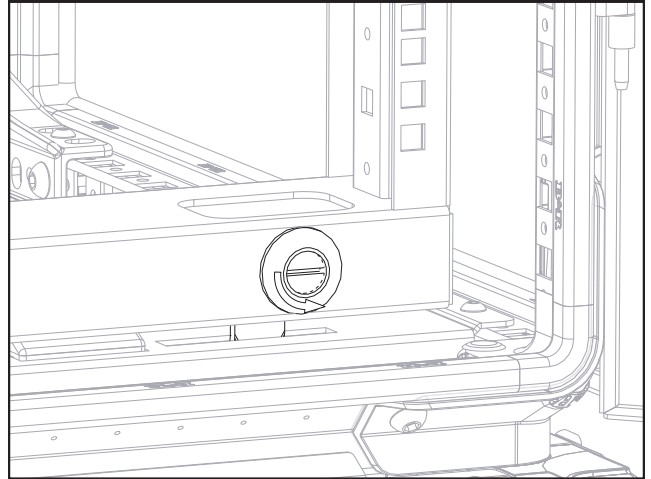 


Opening 90-135° Swing Frame


9-3-1



 
9-3-2

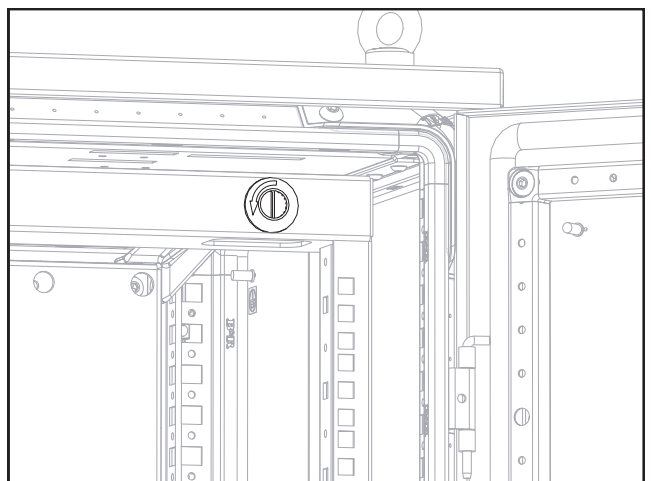

9-3-3

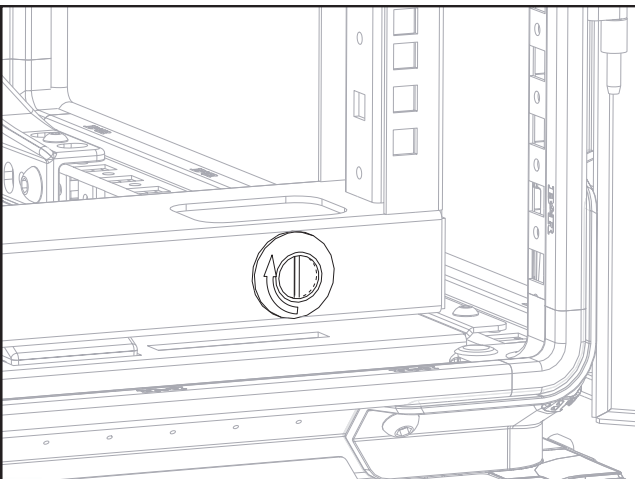 


9-3-4

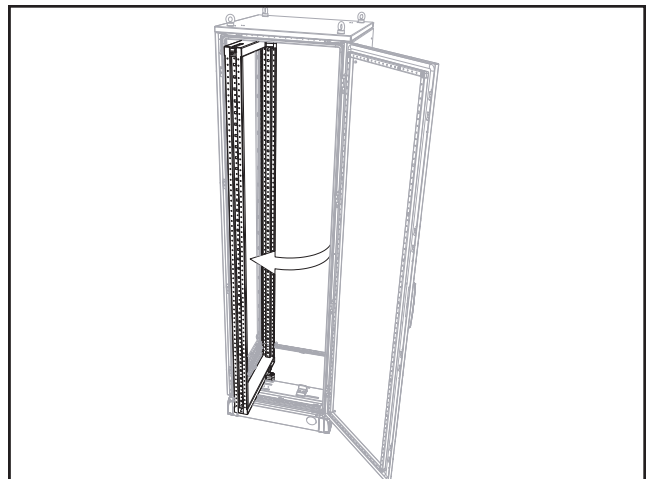 


Installing 180° Swing Frame



 
9-4-1

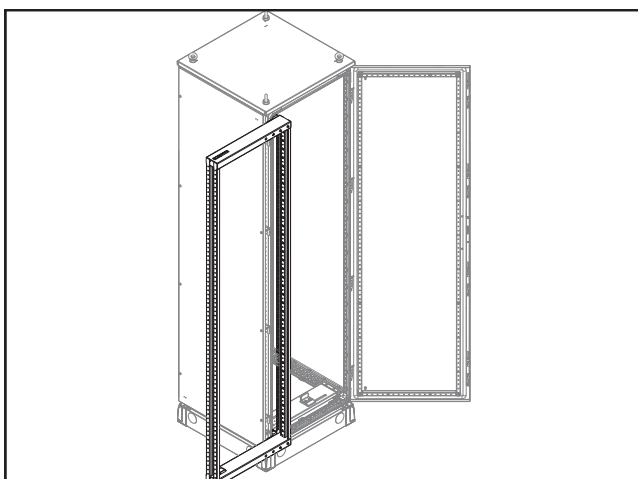


9-4-2

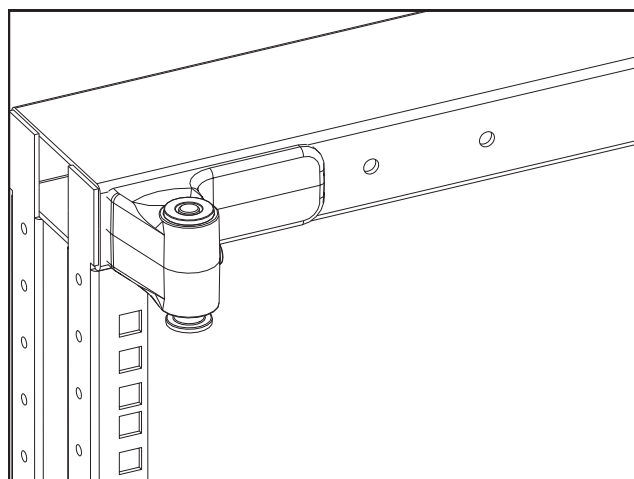 

9-4-3

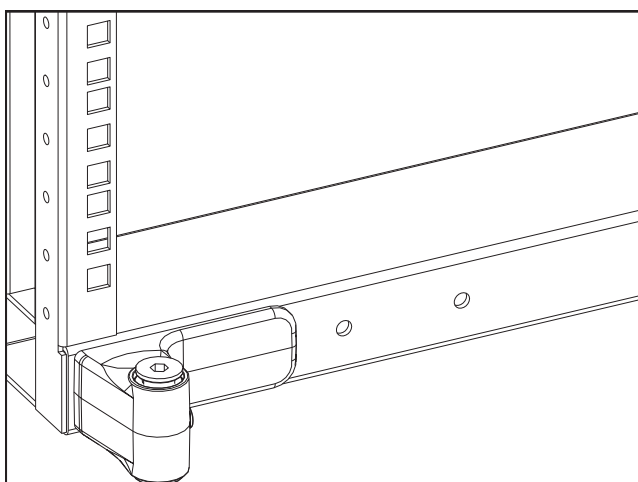 


9-4-4

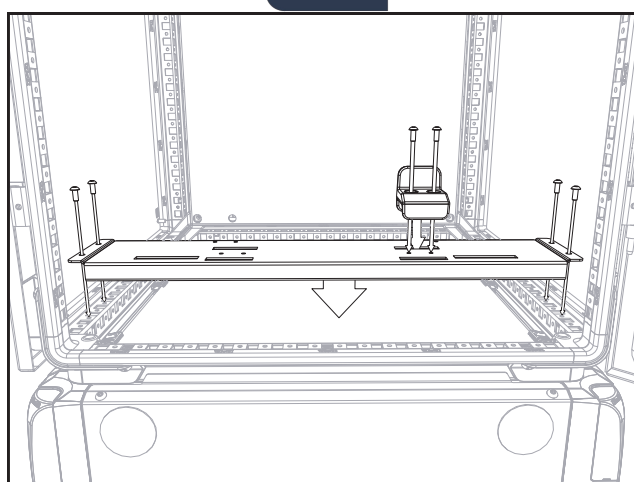 


9-4-5

 Position at front

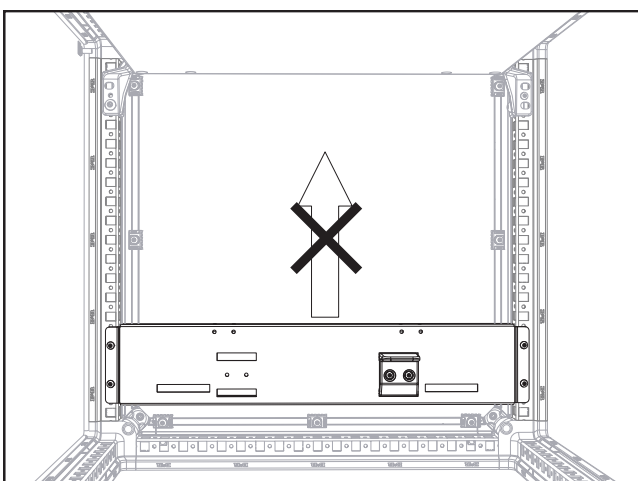


9-4-6

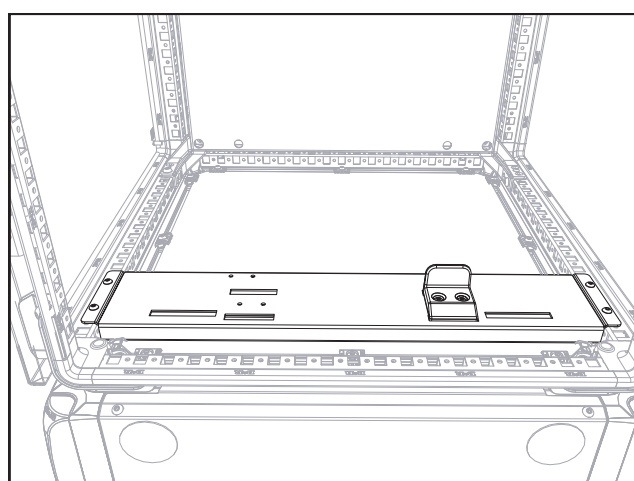 

Installing 180° Swing Frame




 9-4-7

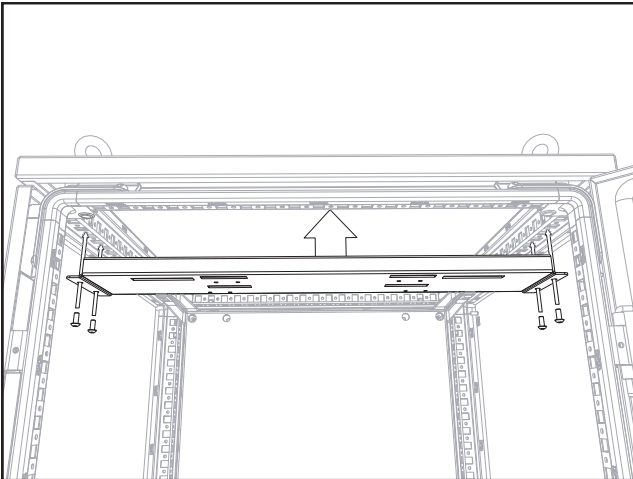


9-4-8

 
Must be same depth as
bottom rail (see 9-4-6)

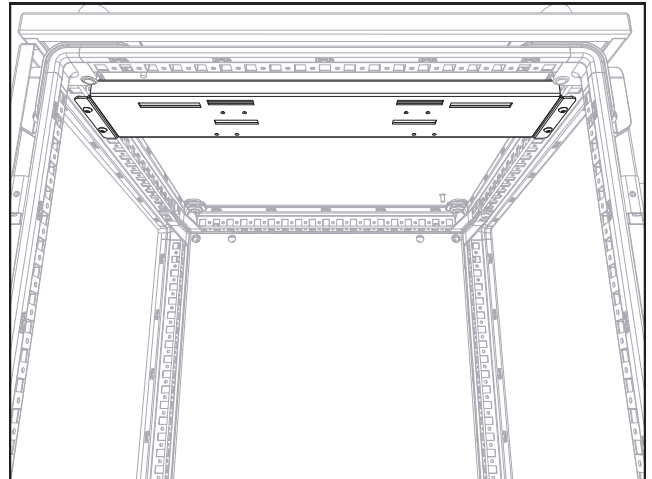


9-4-9

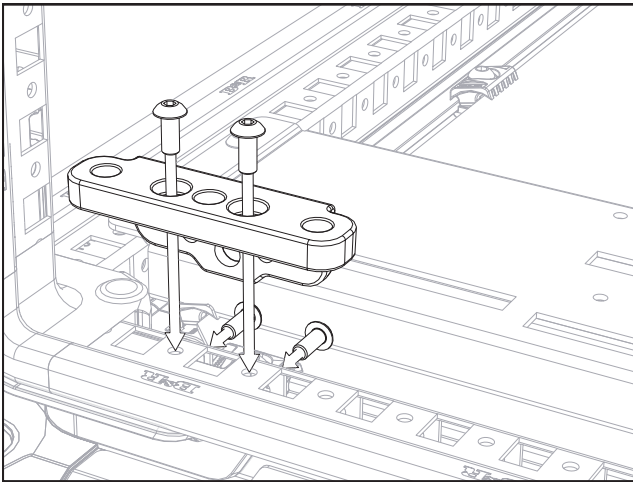 


9-4-10

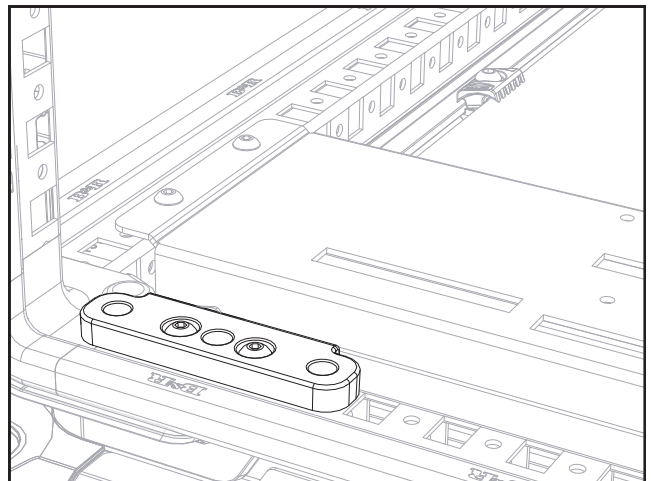 

9-4-11

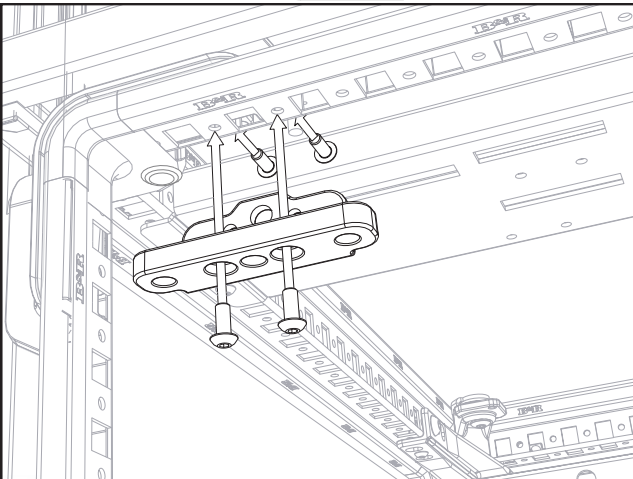 


9-4-12

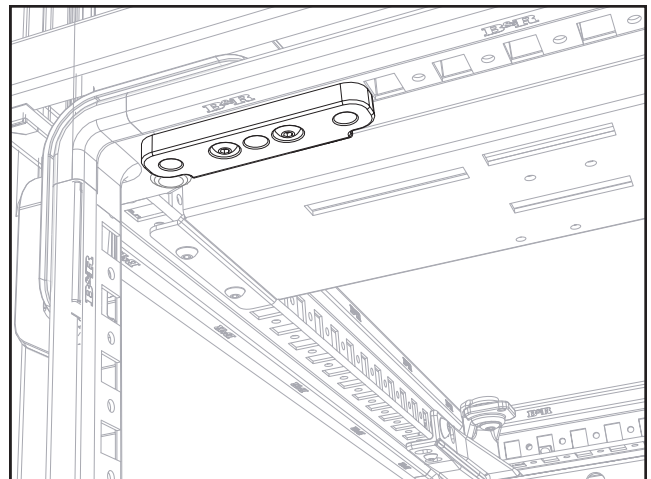 


Installing 180° Swing Frame



 
9-4-13

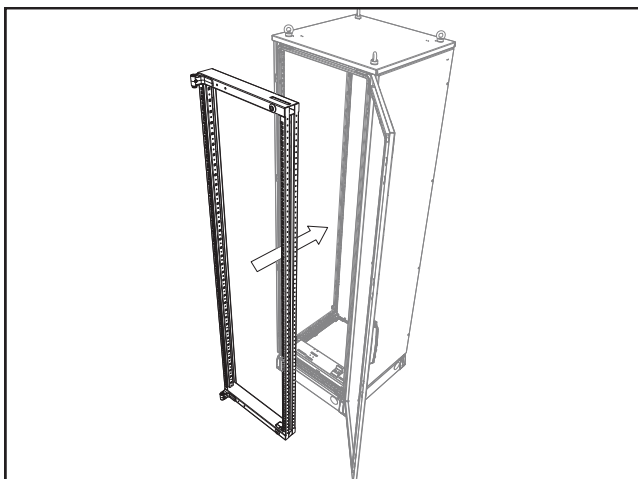


9-4-14

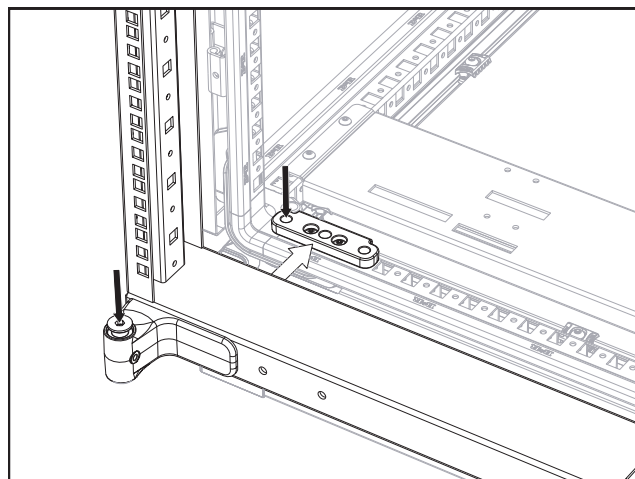 


9-4-15

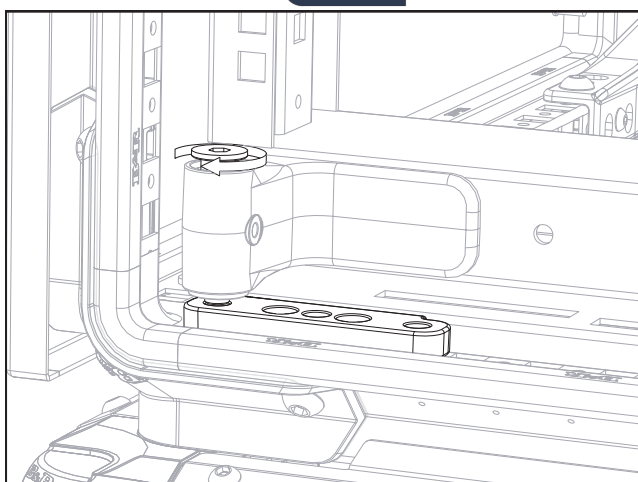 


9-4-16

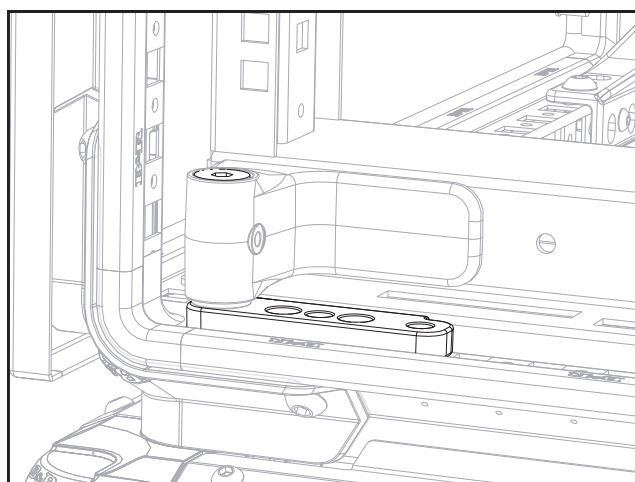 

9-4-17

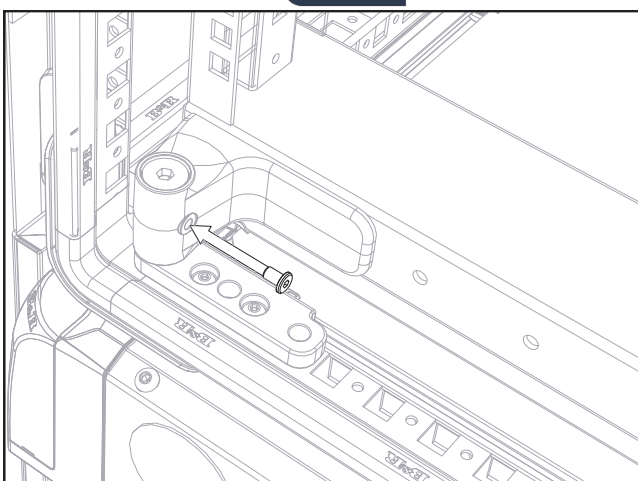 


9-4-18

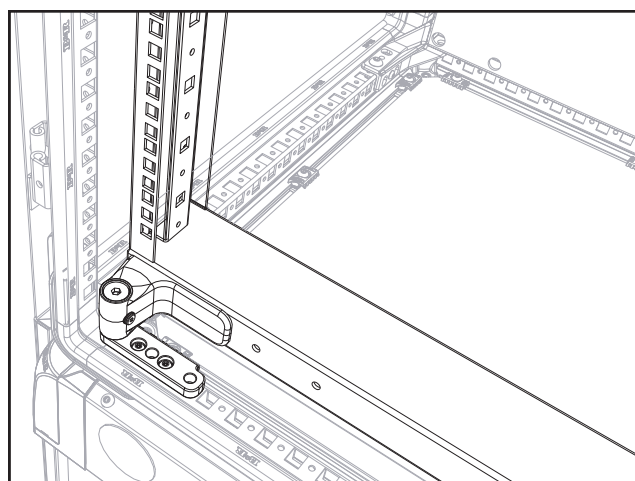 


Installing 180° Swing Frame



 
9-4-19

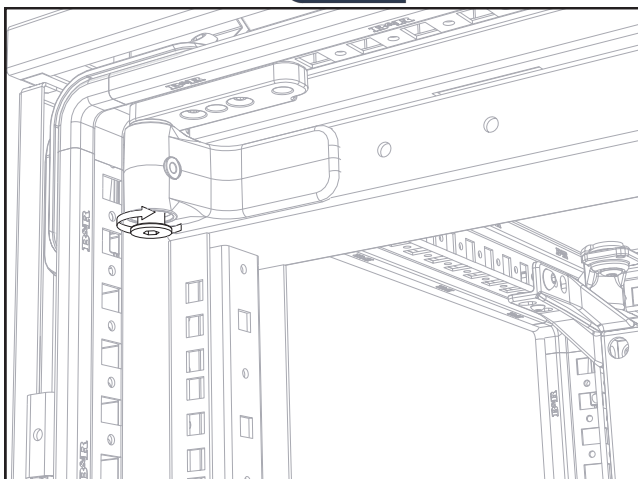


9-4-20

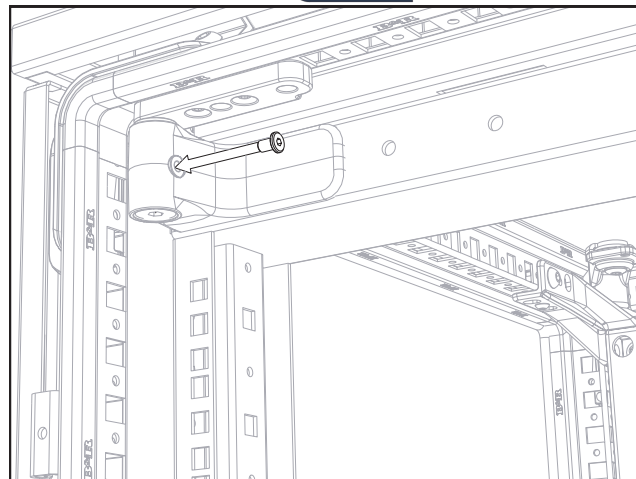 


9-4-21

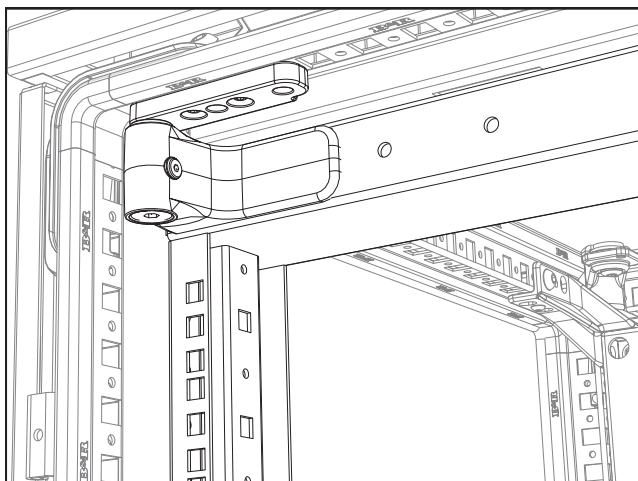 

9-4-22

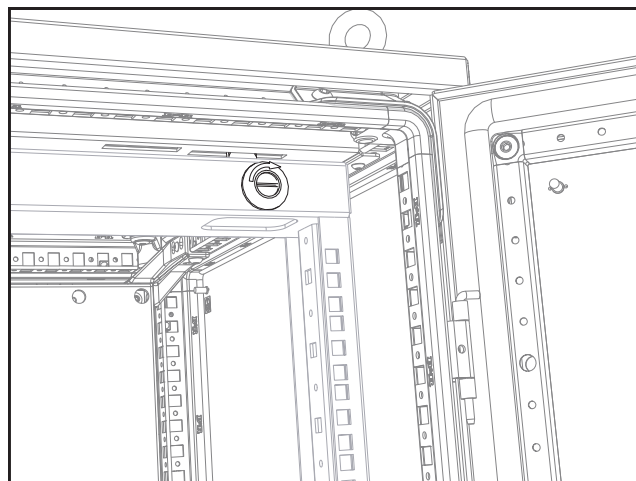 


9-4-23

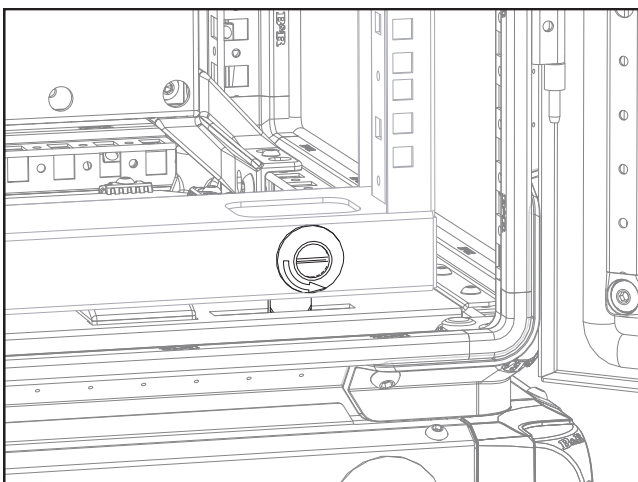 


Opening 180° Swing Frame



 
9-5-1

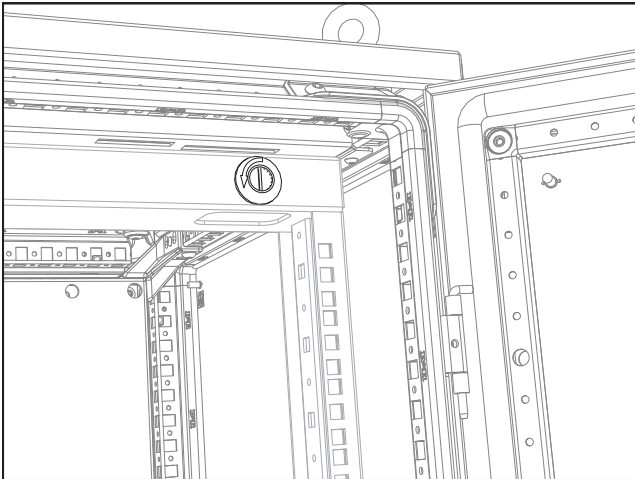

9-5-2

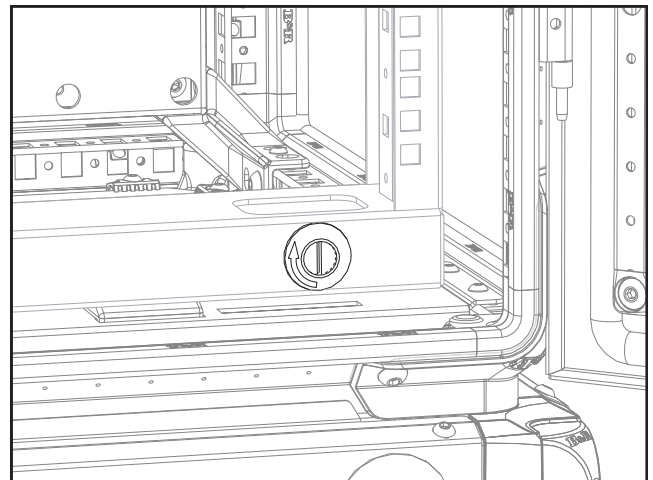 


9-5-3

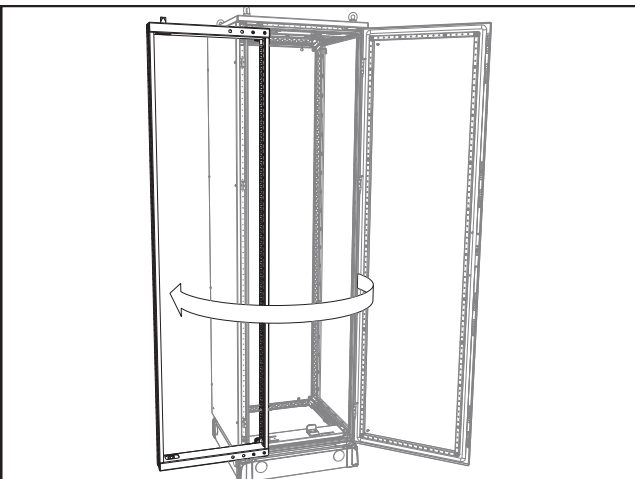 


Reversing Swing Frame (both configurations)



 9-6-1 Change stop position

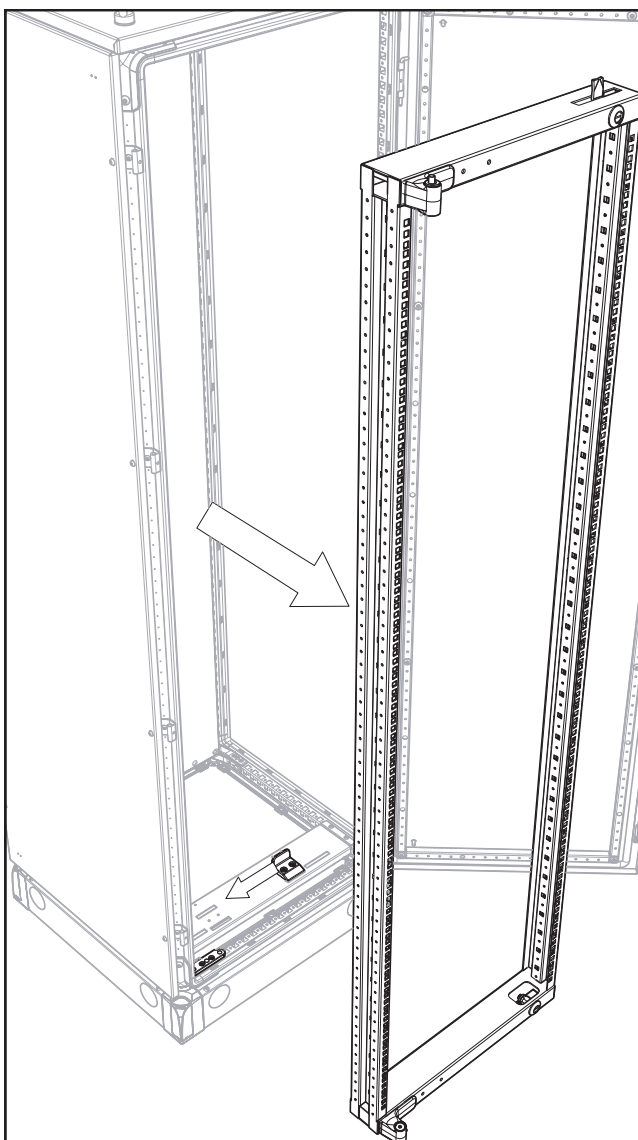

9-6-2 Change hinge pivots position

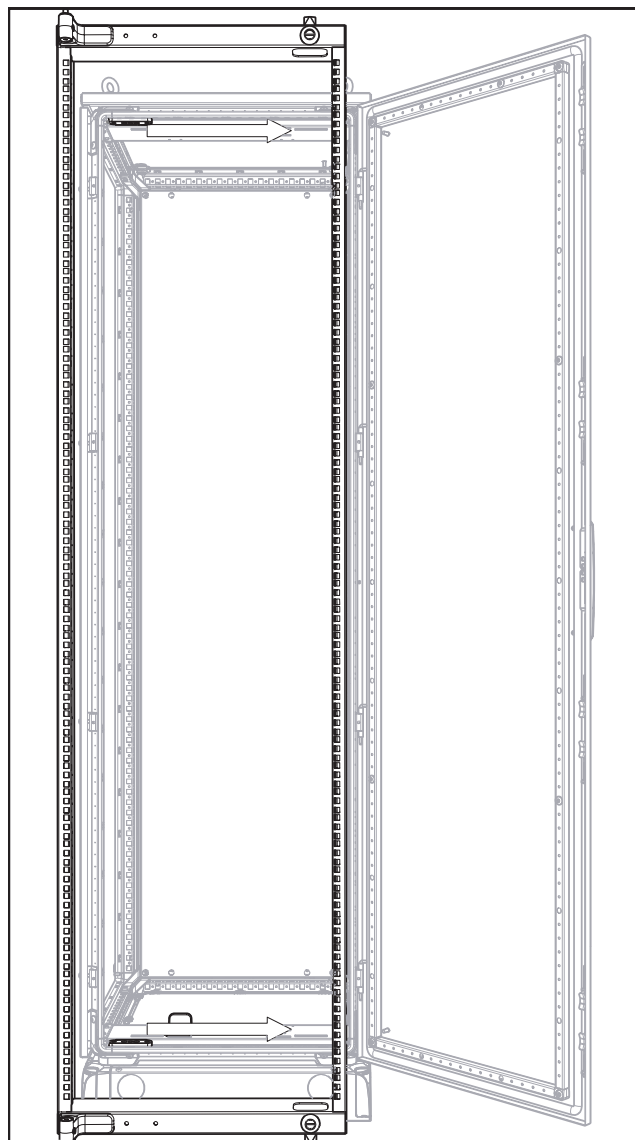 

9-6-3 Rotate 180°



9-6-4 Refit





National Sales

T: 1300 Enclosures (1300 362 567)
brenclosures.com.au

Head Office

51 Stradbroke Street Heathwood QLD 4110 Australia
PO Box 1151 Browns Plains BC QLD 4118 Australia
T: +61 7 3714 1000

QLD Office—Sales & Warehouse

51 Stradbroke Street Heathwood QLD 4110 Australia
PO Box 1151 Browns Plains BC QLD 4118 Australia
T: +61 7 3714 1000

North QLD Office - Sales & Warehouse

Unit 4 / 780 Ingham Road Mount Louisa QLD 4814 Australia
PO Box 7615 Garbutt QLD 4815 Australia
T: +61 7 4727 1900

NSW & ACT Office – Sales & Warehouse

7 Metters Place Wetherill Park NSW 2164 Australia
T: +61 2 9915 9555

VIC & TAS Office – Sales & Warehouse

50-52 Sunmore Close Heatherton VIC 3202 Australia
T: +61 3 9552 0552

SA & NT Office – Sales & Warehouse

505 Grand Junction Way Wingfield SA 5013 Australia
T: +61 8 8417 6222

Northern Territory – Distribution

Jewell Distributors Pty Ltd
Cnr Hidden Valley & Beaton Roads Berrimah NT 0828 Australia
T: +61 8 8947 0870

WA Office – Sales & Warehouse

6 Montgomery Way Malaga WA 6090 Australia
T: +61 8 6310 4777